



2019+ Toyota Corolla HATCH Front Splitter Installation Instructions


Thank you for buying a front splitter from icyaero! We strive to provide you with the best aero on the market along with top tier customer service. Included with your purchase are these instructions specifically made for the product you have purchased. A numbered diagram showing what hardware goes where, as well as pictures, can be found on the last page of these instructions.

We are not liable for any damage which may result from these instructions. Professional installation is always recommended for all of our products.

Tools needed:

- 10mm socket w/ ratchet
- that's it!


Step 1: Remove the 10 screws holding the undertray plastics to the bumper. You will be reusing 6 of these screws when installing the splitter.

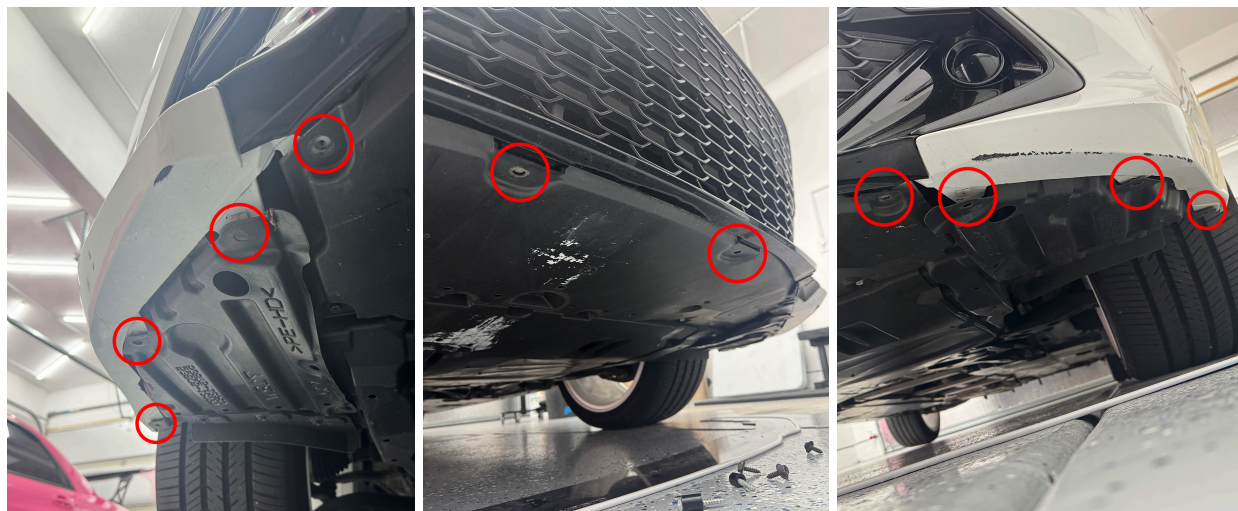

Step 2: Holes 1-3 and 8-10 reuse the OEM screws. Holes 4 and 7 use the included screws and ½ inch spacers (the shorter spacers). Holes 5 and 6 use the included



screws and $\frac{3}{4}$ inch spacers (the longer spacers). Install the screws according to the diagram below!

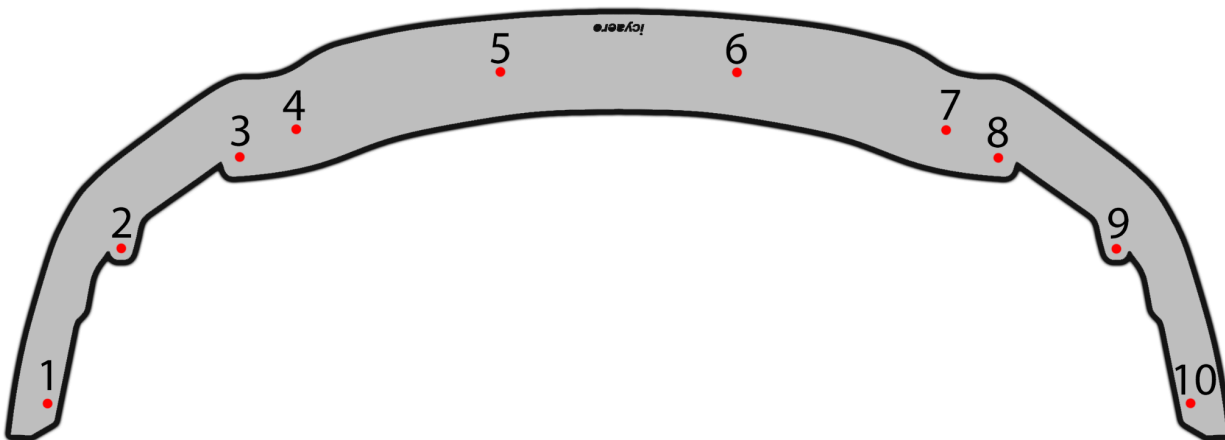

- 1: OEM screw
- 2: OEM screw
- 3: OEM screw
- 4: 1 $\frac{1}{2}$ in screw w/ $\frac{1}{2}$ in. spacer
- 5: 1 $\frac{1}{2}$ in screw w/ $\frac{3}{4}$ in. spacer
- 6: 1 $\frac{1}{2}$ in screw w/ $\frac{3}{4}$ in. spacer
- 7: 1 $\frac{1}{2}$ in screw w/ $\frac{1}{2}$ in. spacer
- 8: OEM screw
- 9: OEM screw
- 10: OEM screw

Side Fin Installation:

If you purchased side fins, there are one of two ways to install them:

Method 1: Use the nuts and bolts included and bolt the fins to the splitter.

Method 2: Use a rivet tool to rivet the fins to the splitter.

Questions? Email: sales@icyaero.com

Follow us on Instagram [@icyaero](https://www.instagram.com/icyaero) and TikTok [@icyaerofficial!](https://www.tiktok.com/@icyaerofficial)