


#### **User Document**


### Pure Locate Application


## **Sections**

Onboarding Stations
Onboarding Assets
Creating a Location
Creating a Floor
Uploading a floorplan image
Cropping an Image


**Onboarding Stations** 

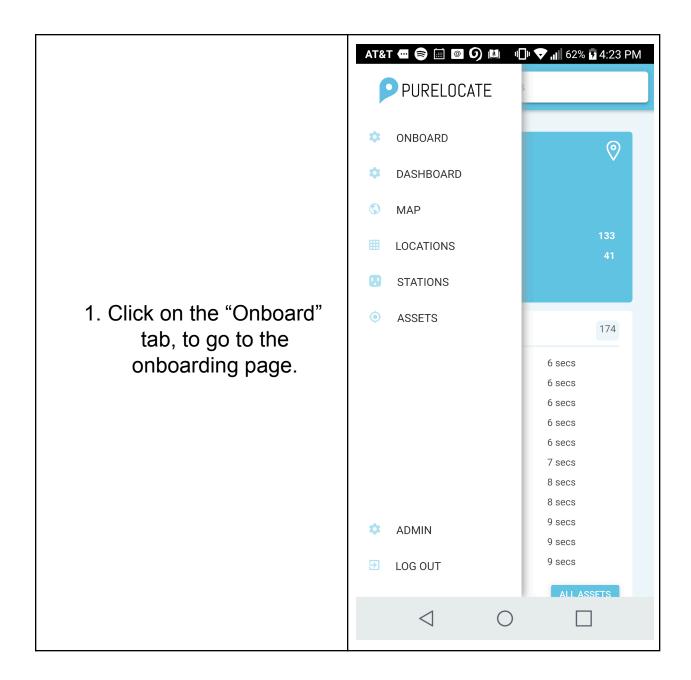


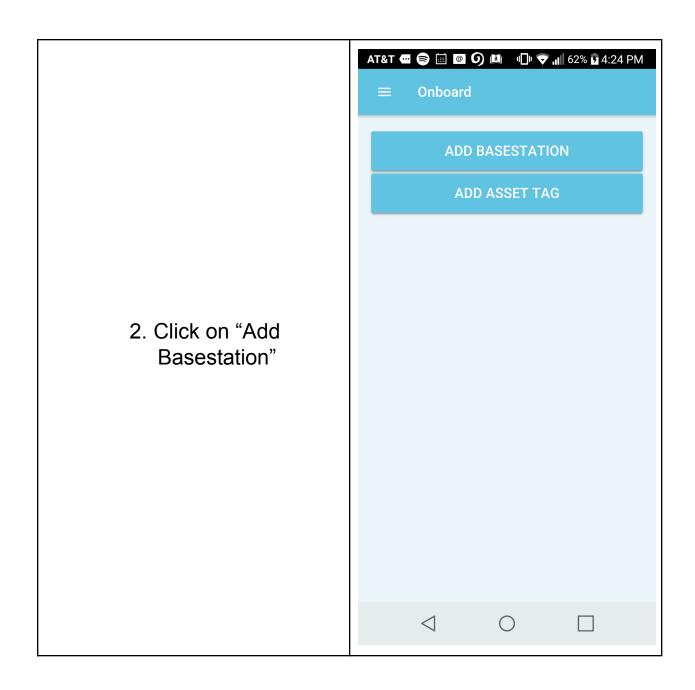


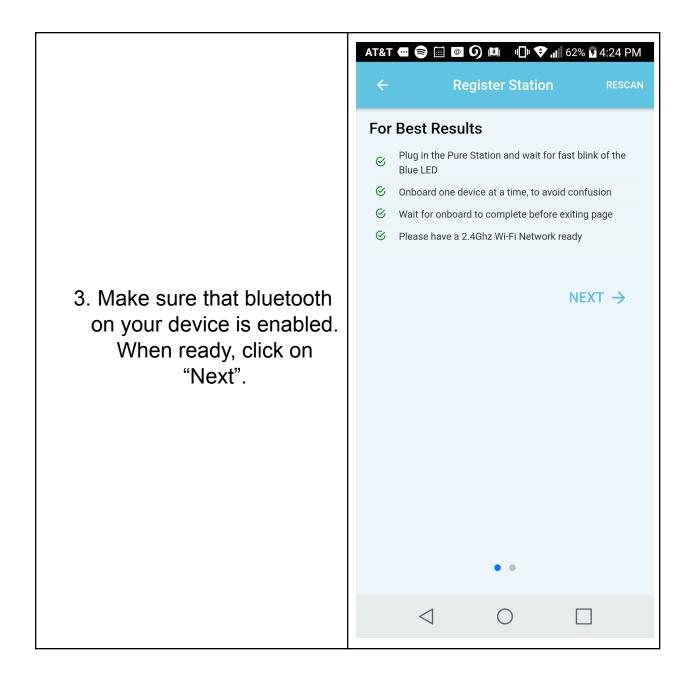

4. Hold your device next to the base station. The closest station will appear on the top of the list. Click on the desired station card.

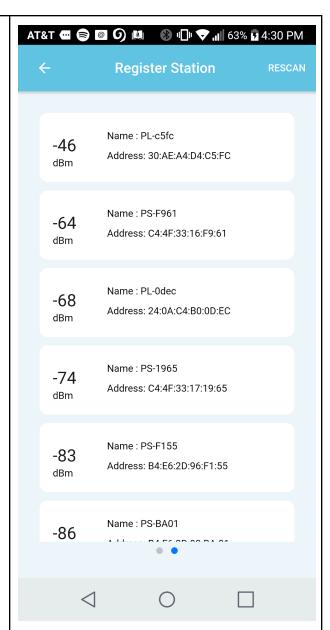


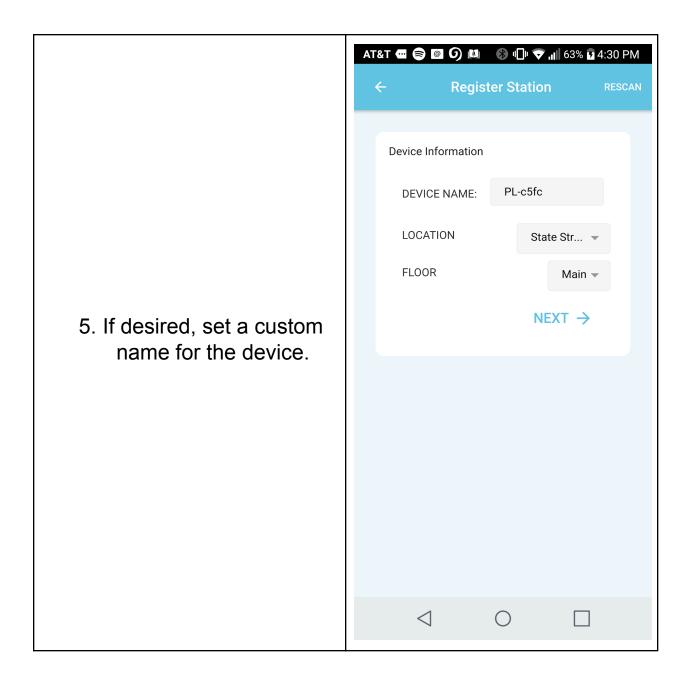

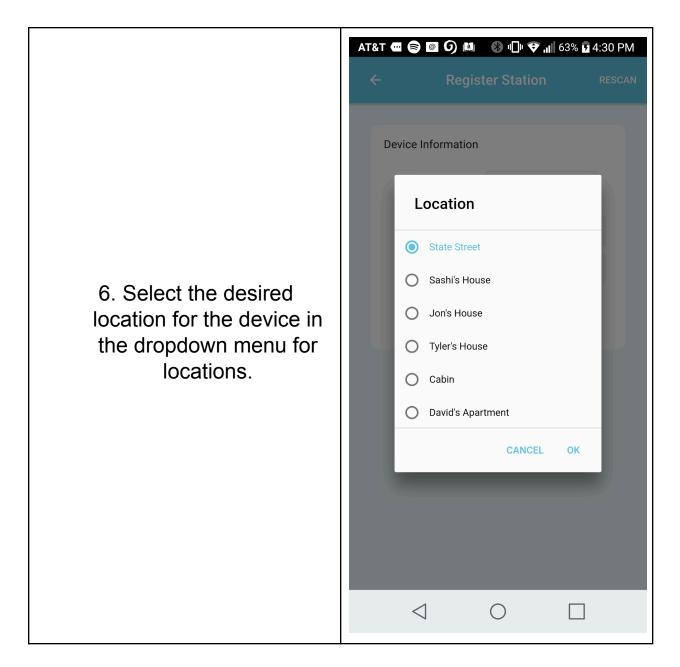


**Device Information** PL-c5fc DEVICE NAME: LOCATION State Str... ▼ **Floor** 7. Select the desired floor for Main the device in the O Test Floor dropdown menu for floors. CANCEL OK  $\triangleleft$  $\bigcirc$ 


8. Select a network that the device will connect to. The list will be populated automatically. If not you the network can be added manually by pressing on the "Add Network By SSID" button.

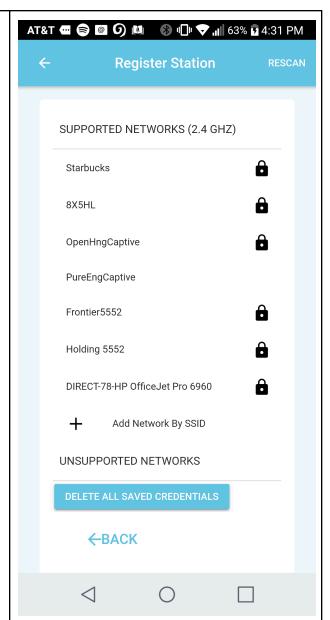


9. Type in the password for the selected network. The password will be saved on the device.

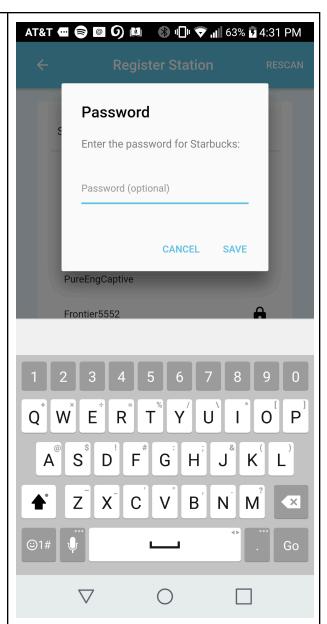



**Register Station Device Position** 10. Drag the cursor across the map to the actual location of the base station. Drag the icon to the device's position **←**BACK  $NEXT \rightarrow$  $\triangleleft$ 0

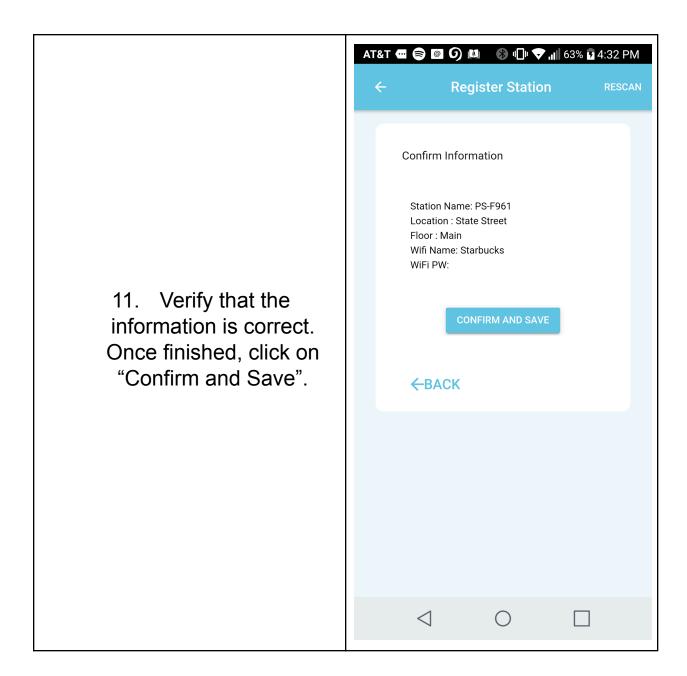

### **Onboarding Assets**

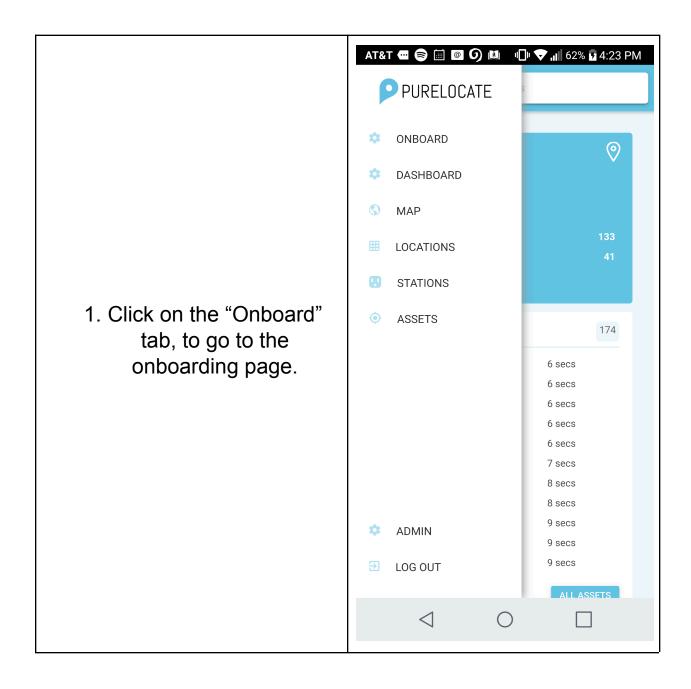


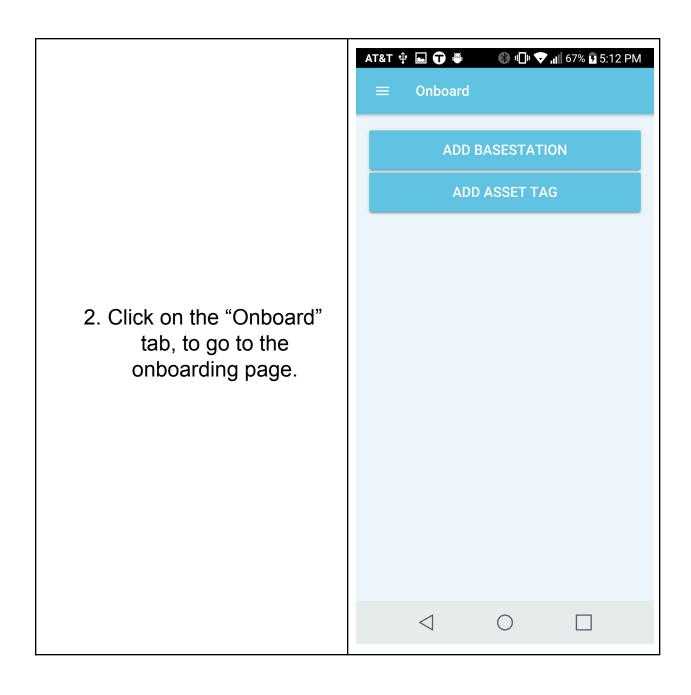

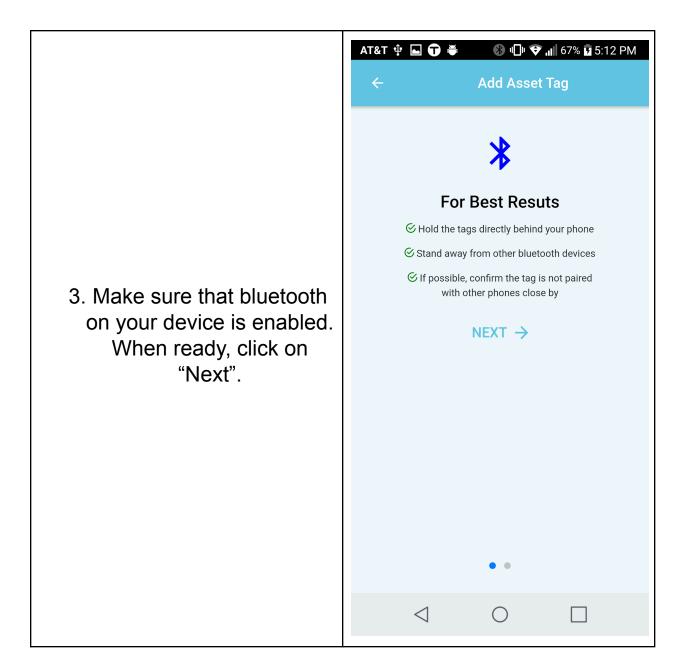



4. Hold the device next to the asset. The closest asset will appear on the top of the list. Click on the desired asset card.




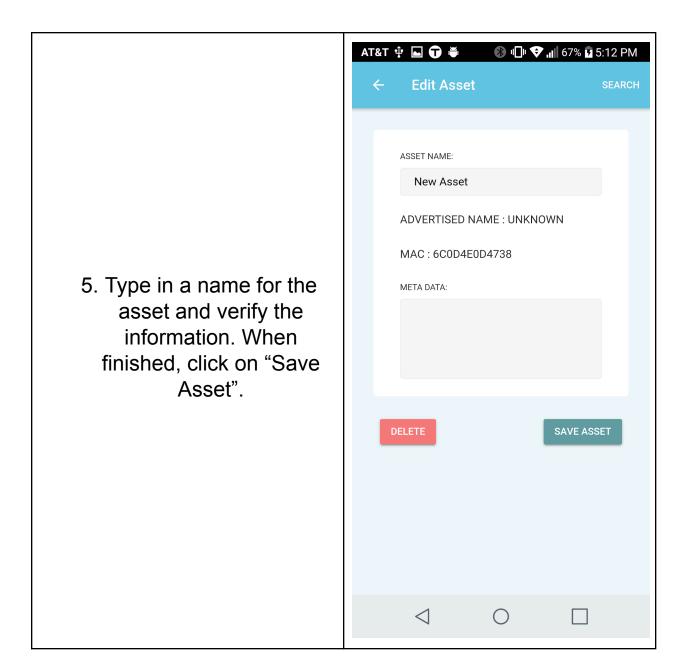


### Creating a Location

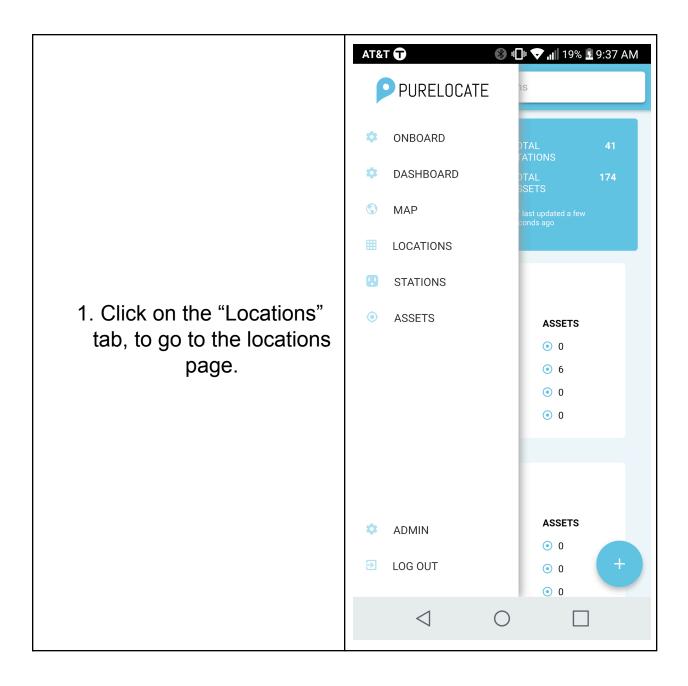


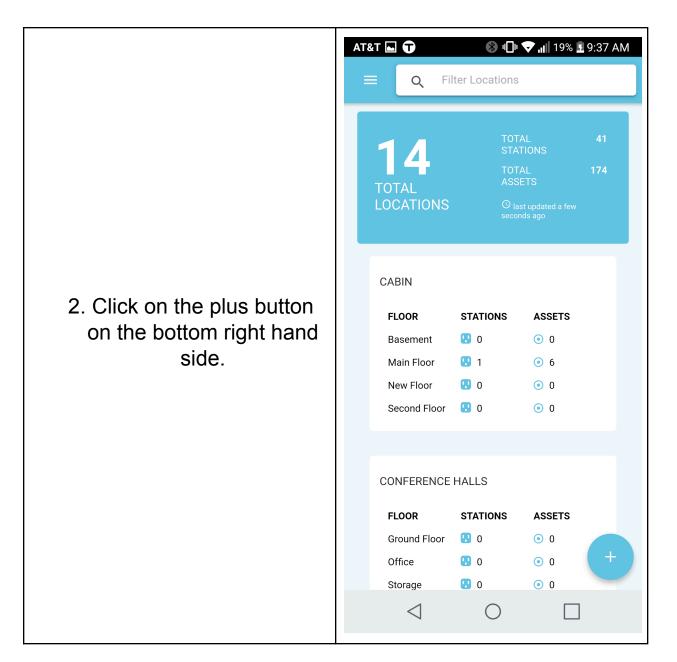

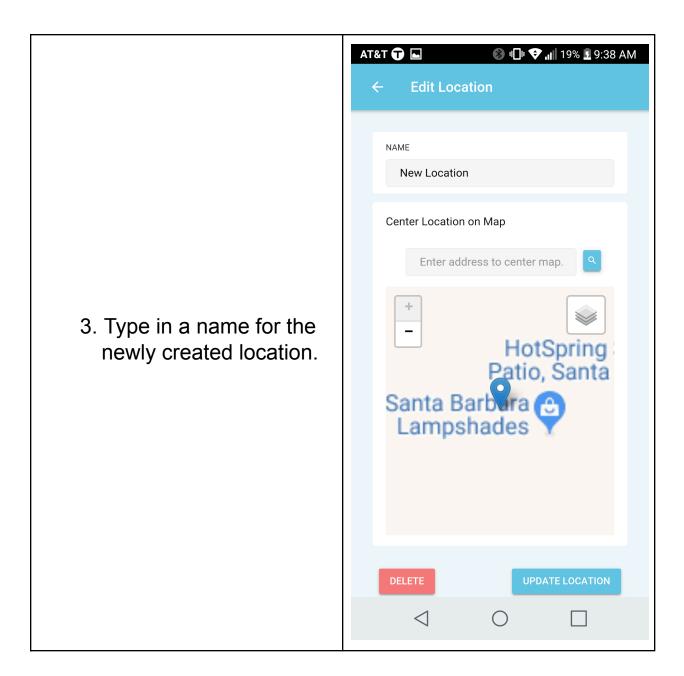



4. Type in the address/coordinates of the newly created location. Alternatively, the map will automatically center to your current GPS location.

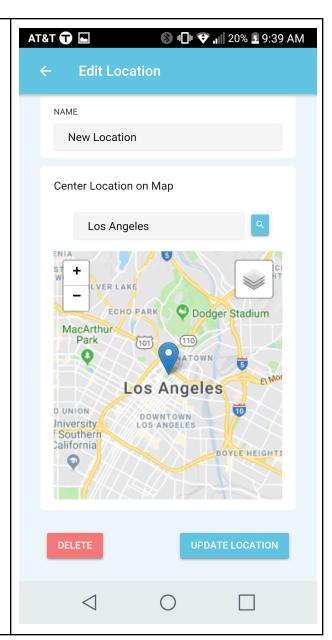


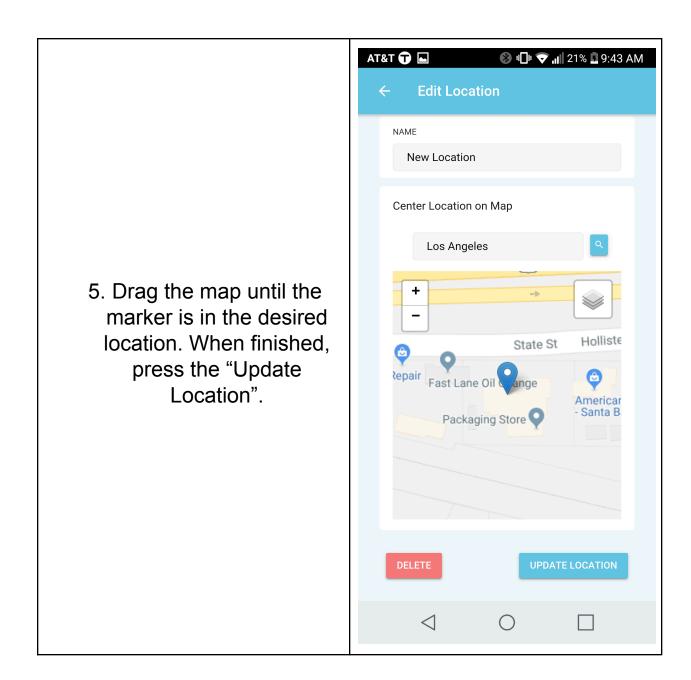


Creating a Floor

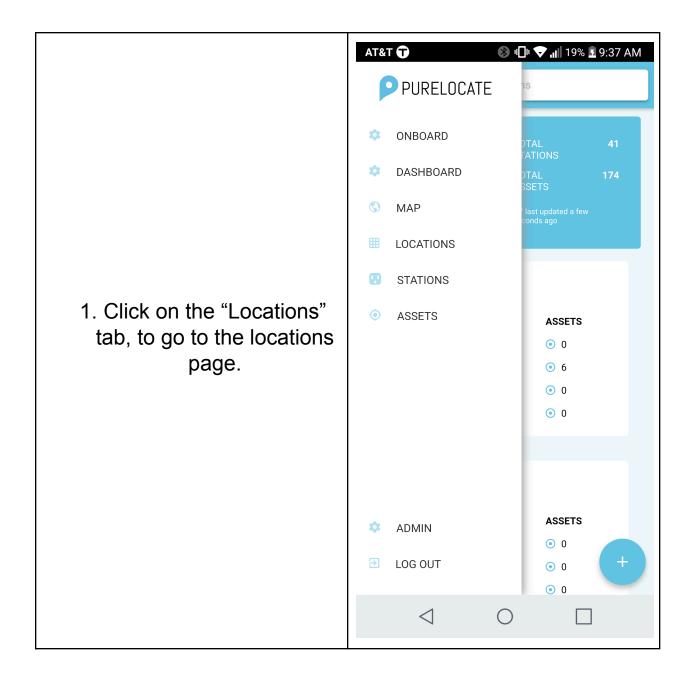

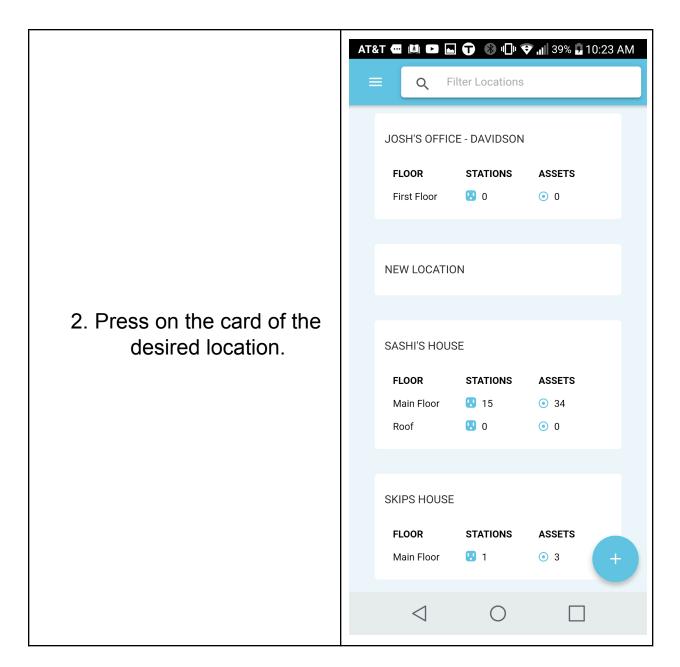

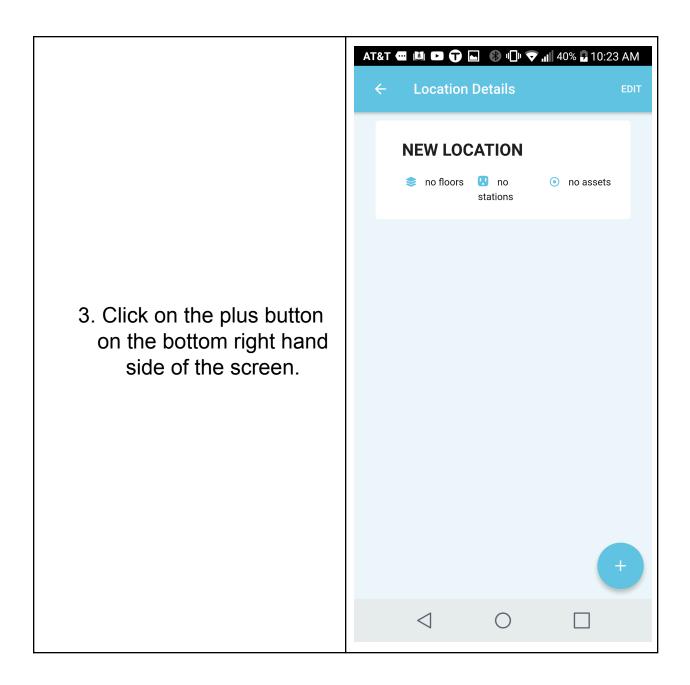

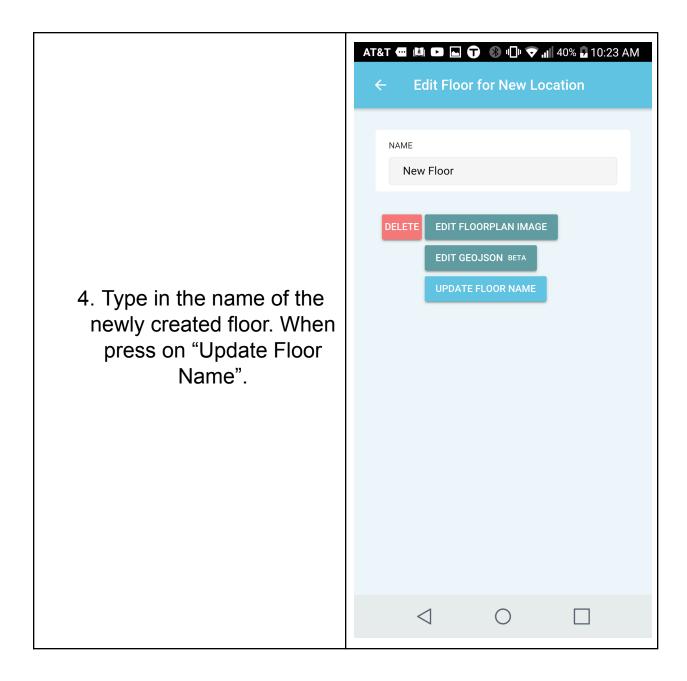


AT&T 🚾 ы 🖸 🔽 😙 🚷 🕕 💎 📶 40% 🖟 10:24 AM **Location Details NEW LOCATION** 1 floor no o no assets stations no FLOOR > NEW FLOOR stations assets You should now be able to see the newly created floor on the locations detail page. EDIT FLOO  $\triangleleft$ 0

### Uploading a floorplan image


Note: If you have a floor plan image file, make sure that the image is cropped and does not have extra white space around the image. On how to do this, see <u>Cropping an Image</u>.

1. Click on the "Locations" tab on the left hand side of the screen. Q Locate Assets PURELOCATE DASHBOARD MAP LOCATIONS TOTAL ASSETS **STATIONS** ASSETS


# 2. Click on the desired location to make changes to.

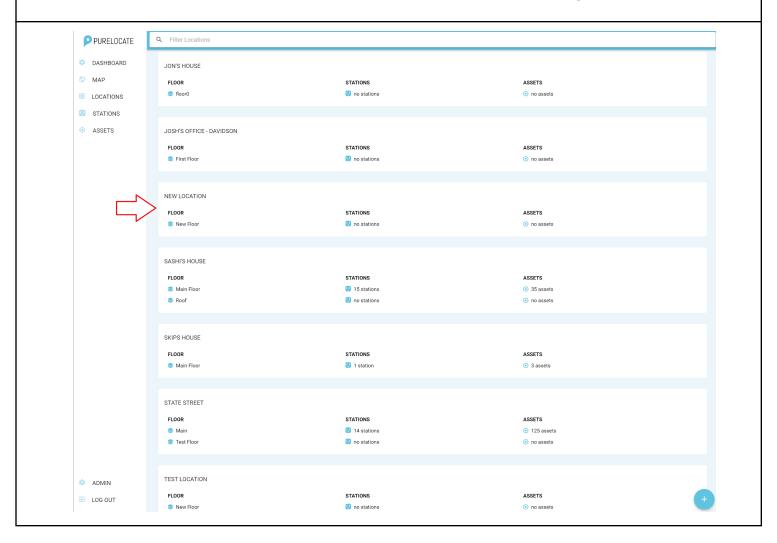

# 3. Click on the "Edit Floor" button on the lower right hand side.

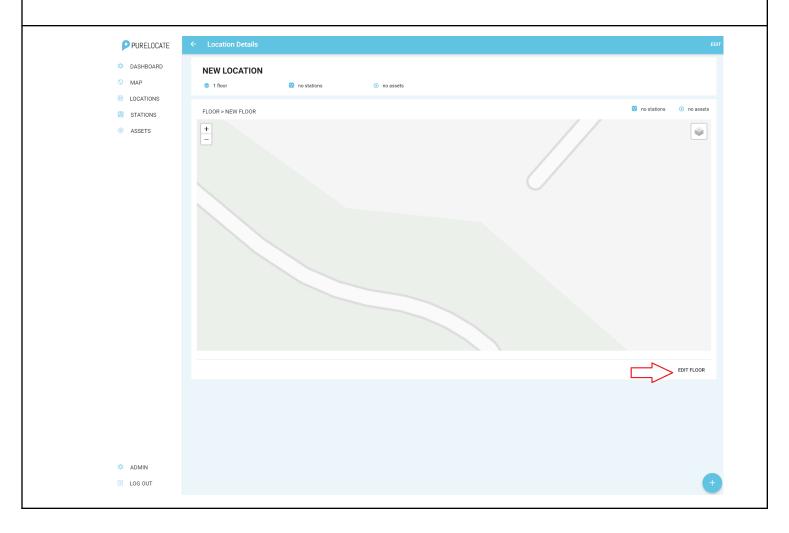


# 4. Click on "Edit Floorplan Image".

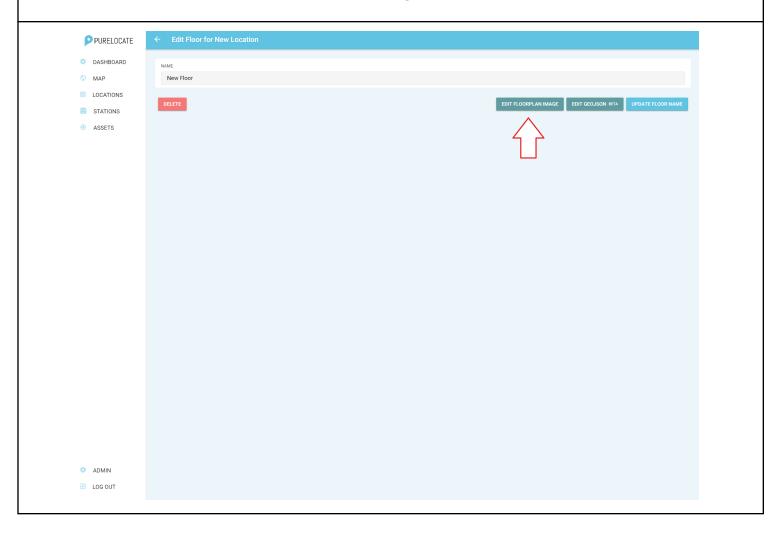


# 5. Click on the "Choose File" button, on the upper left-hand side. A file explorer will appear, allowing you to select a file your device/computer.


Note: If you have a floor plan image file, make sure that the image is cropped and does not have extra white space around the image. On how to do this, see <u>Cropping an Image</u>.

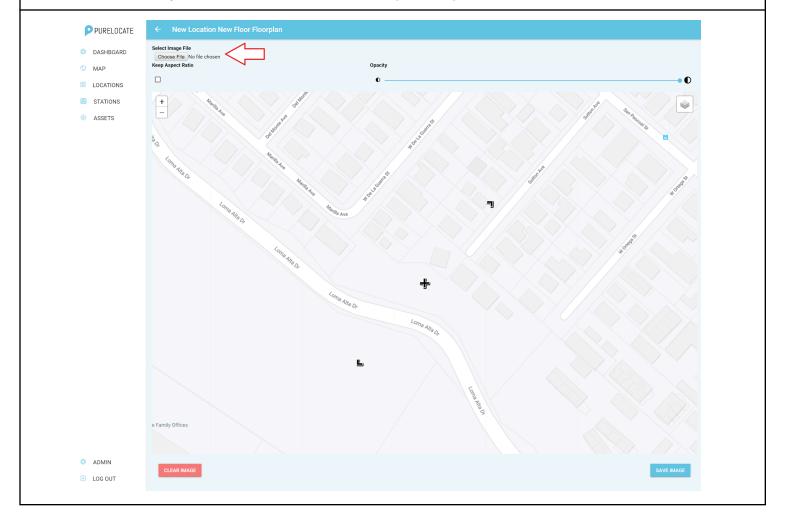


6. To resize the image, drag either the bottom left or upper right hand corner of the image.

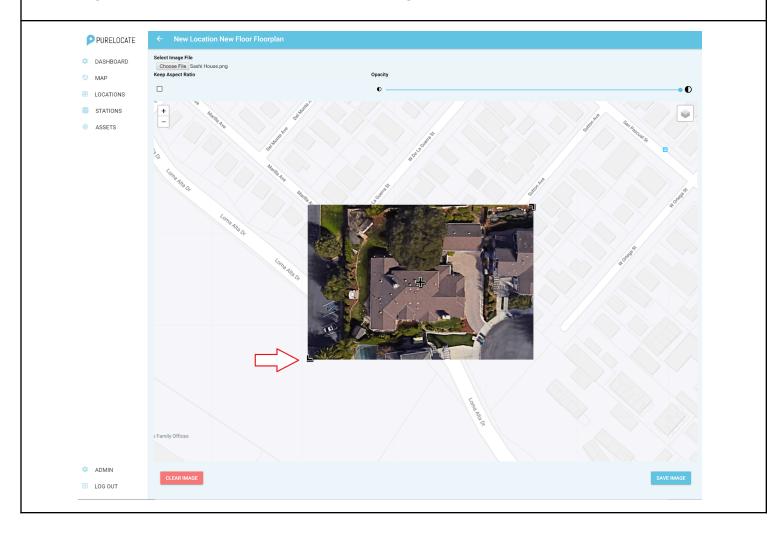


7. To drag the image around the map, hold left click on the center of the image.

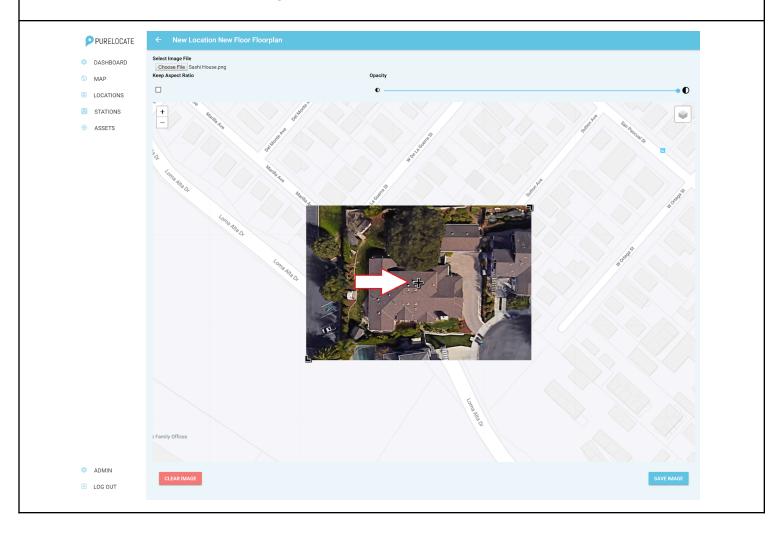

# 8. To see the map behind the image, drag the opacity slider to the desired setting.

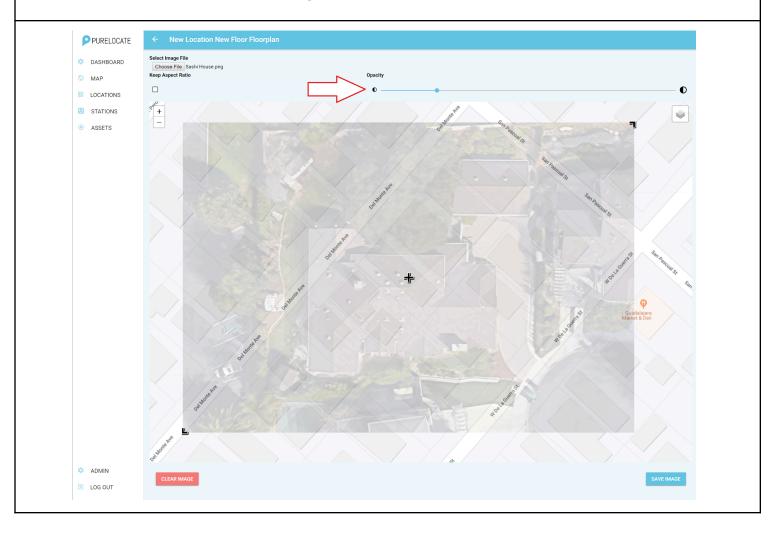


# 9. To finish, click on the "Save Image" button at the bottom right hand side.

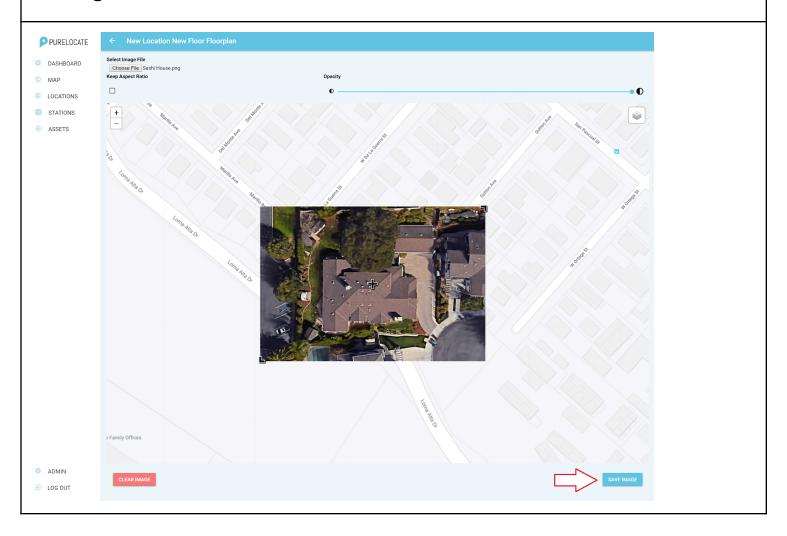

Cropping an Image

1. Open an image in your prefered image editor. In this example, the editor is windows Paint.

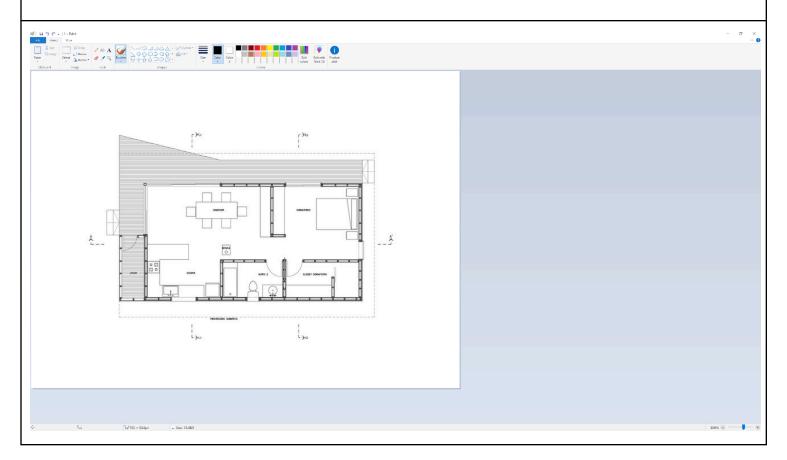

2. Drag a box around the center of the image and press the crop button.

