
## Watkins 240v requirements for full installation of Convertible Spa, (Jetsetter, Beam, Pace, Stride, SX, TX)

## **GFCI Disconnect**

Must be 5' away from spa

## Main Panel

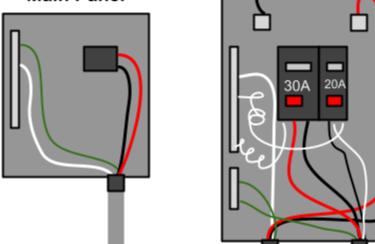

1" Conduit

Examples of common locally available conduit.

Enter the spa with 3/4" size.

Leave enough "whip" to reach the spa controls, extra is easy to cut, too little is just wrong.






## "Whip"

**3/4"** Liquidtight Flexible Conduit.

2x #12 Copper Wires 2x #10 Copper Wires 1x #10 Copper Ground

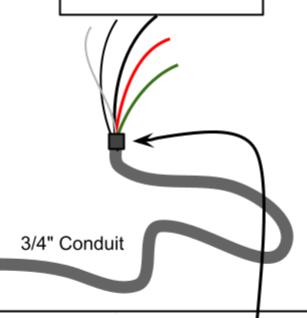



Always use proper fittings, and leave one 3/4" fitting at the end of the whip.