


The Power BLoth-R

By Brian Lough

Visit blough.ie/bloughr for more details.

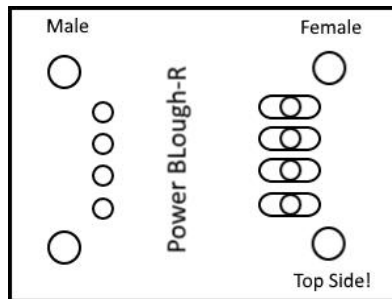

Top side of PCB

Assembly Instructions:

- Place USB connectors so they are on the top side of PCB. (You should be soldering the far side of the PCB)
- (Optional) Cover with the supplied heat shrink

Usage:

- Plug the male port into your Octoprint machine's USB port
- Plug printers USB cable into the female port

Thank you for the support!

YouTube: Brian Lough


Twitch: brianlough

Twitter: @witnessmenow

The Power BLoth-R

By Brian Lough

Visit blough.ie/bloughr for more details.

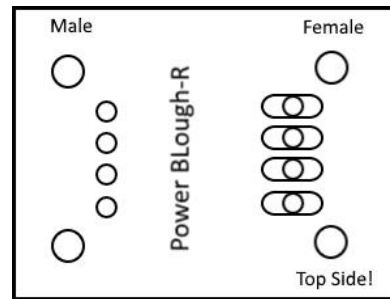

Top side of PCB

Assembly Instructions:

- Place USB connectors so they are on the top side of PCB. (You should be soldering the far side of the PCB)
- (Optional) Cover with the supplied heat shrink

Usage:

- Plug the male port into your Octoprint machine's USB port
- Plug printers USB cable into the female port

Thank you for the support!

YouTube: Brian Lough


Twitch: brianlough

Twitter: @witnessmenow

The Power BLoth-R

By Brian Lough

Visit blough.ie/bloughr for more details.

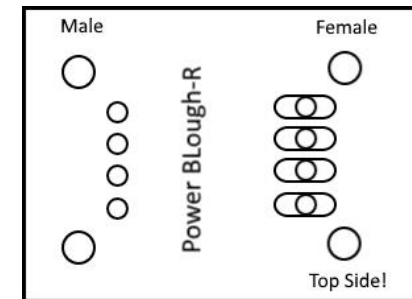

Top side of PCB

Assembly Instructions:

- Place USB connectors so they are on the top side of PCB. (You should be soldering the far side of the PCB)
- (Optional) Cover with the supplied heat shrink

Usage:

- Plug the male port into your Octoprint machine's USB port
- Plug printers USB cable into the female port

Thank you for the support!

YouTube: Brian Lough

Twitch: brianlough

Twitter: @witnessmenow

