

AT-D878 Contact List Import from AmateurRadio.digital Database

The following instructions are designed to only upload the contact list from AmateurRadio.digital to your radio. If you wish to save them into your custom codeplug on your computer then open your custom codeplug first before moving to step 1. Otherwise you can start with an empty codeplug to import the contact lists only into your radio without saving them to your computer.

1 Download the Contact List by visiting <http://AmateurRadio.Digital> in your browser and click on Digital Contacts Wizard Button.



2 Select “AnyTone AT-D868UV or AnyTone AT-D878UV” if not already selected and click Next.

Step 1

Select Radio

AnyTone AT-D868UV ▼



3 Click on **Step 3 tab** (you may click on tab 2 to make optional adjustments if you like) and then click “**Download**”. This will be saved to your download directory or the directory you have chosen on your computer.

Step 1 Step 2 **Step 3**


Finalize and Download:


Confirm all your settings are correct and click the Download button to generate your custom CSV file.


 **Reminder: be aware of your radio's Digital Contacts limits.**


Download Reset

The File Name that it will save as is “**custom_contacts_d868uv.csv**” unless you change it.

4 Now Start CPS  (optionally you may open your saved codeplug if you want to save the new contact list)

5 Click “Tool” on the top menu bar 

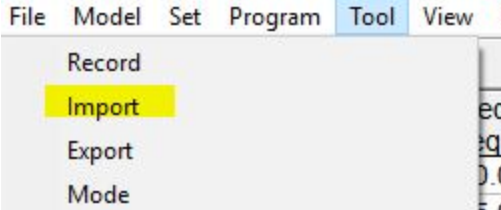6 Click “Import” from the dropdown 

7 Click “Digital Contact List” on left side 

An open dialog box will display. Navigate to where you saved the file in step 3 above.


8 Click “open” button to load the file.



7 Click “Import” button. Again wait for the contact list to import into the CPS/Codeplug.



8 Click “ok” on the dialog box indicating the import was complete/successful.

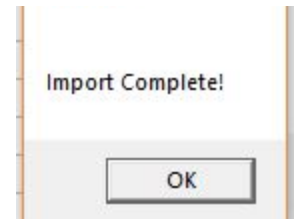


9 Power off Radio -> Connect your radio to your computer using the programming cable -> turn the radio on.


10 Click on “Set” on the top menu of the




11 Click “Set COM” from the dropdown

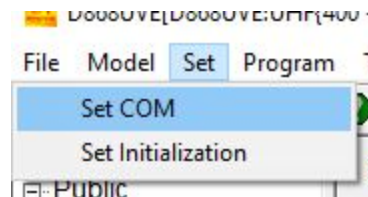


12 choose your comm port from the dropdown. In most cases this is automatically selected for you. Click “Ok”

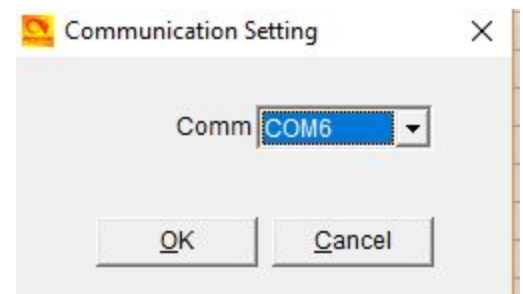


13 Click “Program” on the top menu of the cps.

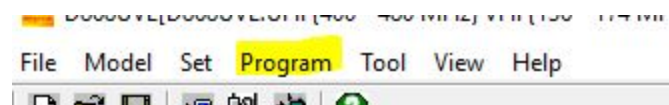


14 Click “Write to Radio”

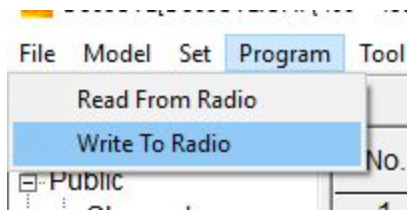

15 Click “OK” on the next dialog box.

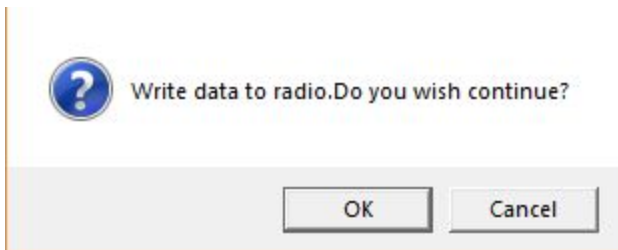

16 Check “Digital Contact List” and uncheck “Other Data” to import the contact list only. Then click OK. **** BE PATIENT WHILE IT LOADS TO YOUR RADIO. You will see a progress dialog box as displayed below.**

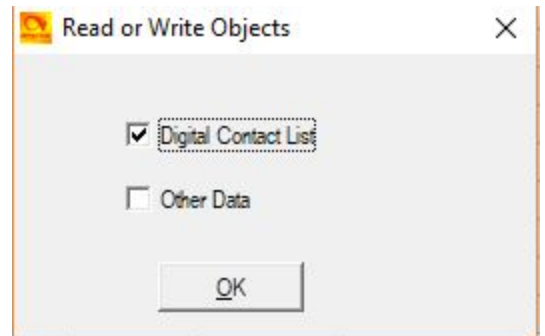

Write data to radio



Completion percentage: 54%

17 You will next receive a dialog box indicating completed. Let your radio catch up and will reboot automatically when completed. The radio will display “COPYING DATA TO THE RADIO PLEASE WAIT! NOT POWER OFF”.

You are Done! Enjoy!

