

Prius Offroad 2012–2017 Prius V - 2" Hitch Installation Guide

IMPORTANT! Read instructions fully before starting.

Some Prius model variations may require slight adjustments.

NEVER exceed 325 lbs tongue weight or 2,500 lbs trailer weight.

Tools Needed

- Ratchet + 17mm socket
- Torque wrench (65 ft-lbs)
- Pry bar
- Lubricant (e.g. WD40)

Install Steps

1. Raise rear of Prius off of ground and support with ramps or jack stands.
 - Never work under a vehicle supported only by a jack.
2. Remove Exhaust Hanger & Tow Hook:
 - Passenger side: Lube rubber hanger, use pry bar to remove muffler stud from hanger, remove (2) 17mm bolts and hanger. (Figure 1) Save hanger.
 - Driver side: Remove (2) 17mm bolts and discard tow hook bracket. (Figure 2)
3. Mount Hitch: Raise Prius Offroad Hitch to frame. May need to fish hitch behind rear bumper while gently pulling bumper bottom away from hitch.
 - Driver side: Reinsert 17mm bolts through hitch into weld nuts.
 - Passenger side: Place exhaust hanger on top of hitch (hanger–hitch–car), then reinsert 17mm bolts through hanger and hitch into weld nuts. Hand tighten.
4. Tighten Hardware: Torque hardware to 65 ft-lbs. Reinstall exhaust hanger into rubber bushing.

Congratulations! Your Prius Offroad Hitch is ready for use!

Support

 priusoffroad@gmail.com

 (530) 907-7994

WARNING Your vehicle may have a lower tow rating than this trailer hitch. If your vehicle's tow rating is less than the rated towing capacity on your Torklift Central trailer hitch, your trailer hitch capacity is limited to your vehicle's factory rated towing capacity. ***DANGER*** Never exceed your vehicle's manufacturer's recommended towing capacity.

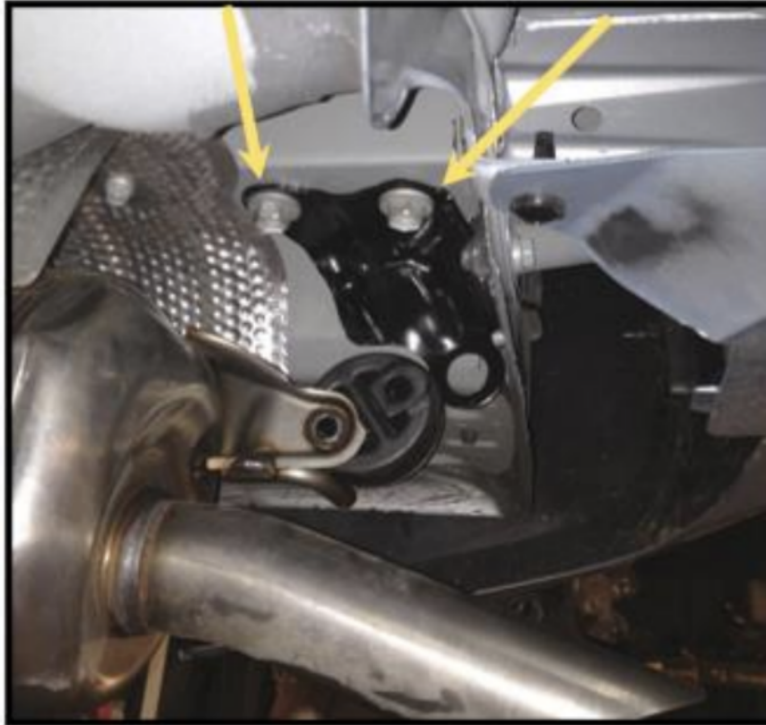


Figure 1



Figure 2