


Luxafor ORB

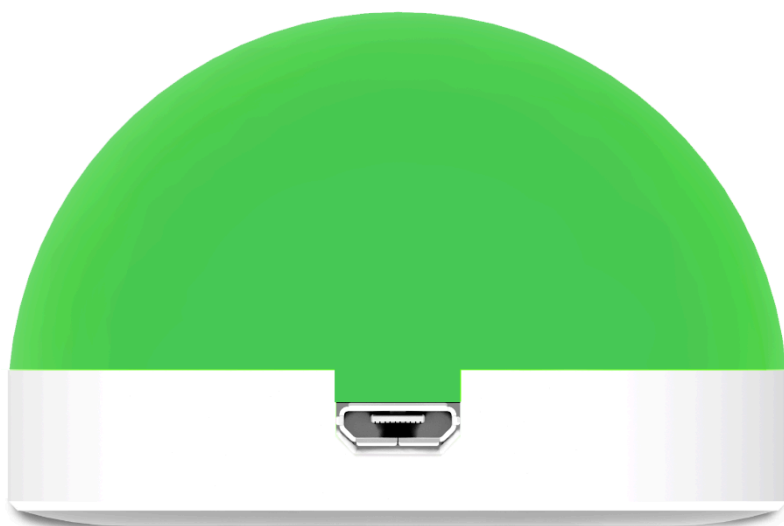

User Manual

Luxafor ORB Package Contents

1x Luxafor ORB
1x USB/-C Data Cable
0.5 m (20") or 1.5 m (60")
1x Magnet with
double-sided tape



Product Specifications

Dimensions: $\varnothing$ 50x 35 mm
(1.97 x 1.97 x 1.38")

Weight: 28g

Consumption: Up to 0.5 W

Light: 6 x RGB LEDs

Charging:

Micro USB powered (With the standard
USB /USB-C data cable provided in the
packaging)

Viewing angle: 180

Getting Started


1. Download and install Luxafor desktop software for your OS from <https://luxaformanual.com/> ¹.
2. Remove the plastic from the double-sided tape that is on the magnet and attach the magnet to any surface on which you would like to place your Luxafor ORB. ²
3. Launch Luxafor software on your computer.
4. Connect Luxafor ORB to your computer using the USB cable included and enjoy! ³

How To Use Luxafor Software



In the General section of the Luxafor software, you can choose in which mode you want to use Luxafor. Each mode takes control of your Luxafor, so **only one tab (mode) can be active at a time**.

Solid Color mode

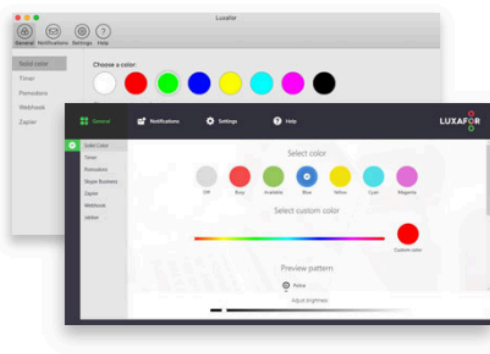


Choose from pre-set colors like Red for Busy and Green for Available or define other color meanings with Custom Color by using the slider to choose from 16M available colors.

Available on:



Timer mode

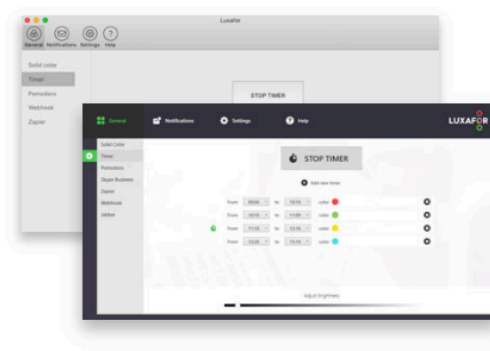

With the Timer, you can plan and schedule your tasks throughout the day. Set the times when you can't be disturbed and when you're available.


Just press "Add new timer", input the times, and choose a color and Luxafor ORB will switch the lights accordingly.

Available on:



Pomodoro mode

Change Pomodoro time and length of breaks to fit your work pace. Luxafor notifies you of the beginning of a session with a blinking pattern of your choosing.

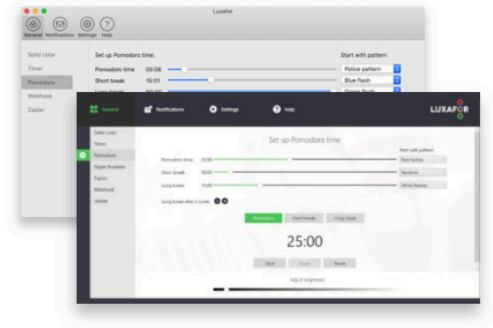


Luxafor will automatically turn Red when you are on your Pomodoro session and do not wish to be disturbed. It will turn Green when you are on your break.

It is possible to Start, Pause or Reset your Pomodoro sessions.

Available on:  

Microsoft Teams mode

In Teams mode, Luxafor indicates your availability status on the device according to Teams status.

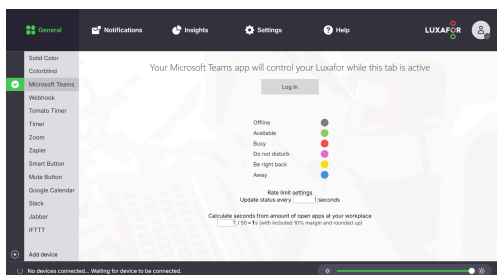


Follow these instructions to connect Luxafor with Microsoft Teams:
<https://luxafor.com/microsoft-teams-teams-only-mode/>

Available on:  

Zapier mode

You can choose from 3 types of actions: Play Pattern,

Solid Color, or Blink Color, and choose from a variety of colors or modes for each action.

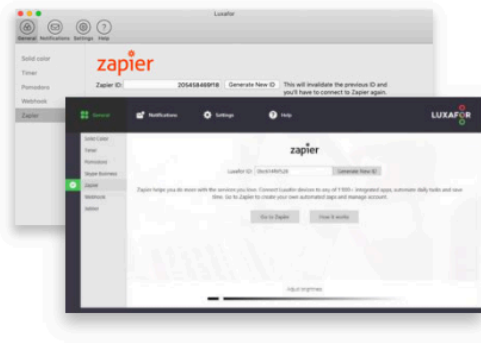

Copy your unique Luxafor ID from this tab when creating a zap on Zapier, test the connection there and enjoy your new workflow!

Get early access here:


<https://zapier.com/apps/luxafor/integrations>

Read more detailed instructions on Zapier integration here: <https://luxafor.com/zapier/>

Available on:



Webhook mode

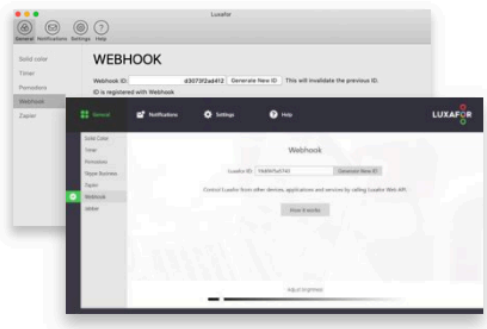

Study, alter and develop new solutions, integrations, and services!

Control other devices and create more features by calling Luxafor Web API!


All information is available here:

<https://luxafor.helpscoutdocs.com/article/25-webhook-api-basics-and-guidelines>

Available on:



Cisco Jabber mode

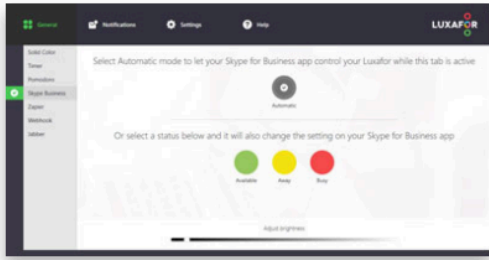

Reduce delays in communication - allow Luxafor ORB to change color according to Jabber's presence status and blink red during a call!

Follow these instructions to connect Luxafor with Cisco Jabber:


<https://luxafor.com/luxafor-cisco-jabber-presence/>

Available on: 

Notifications

Set Luxafor ORB to blink when there is an unread email in your inbox or blink only on the arrival of a new email. You can even set up notifications for emails containing specific keywords.

To connect your email choose “**Gmail**” if you have a Gmail account or “**Mail**” for any other email. To set up a connection, fill out the required fields in the pop-up.

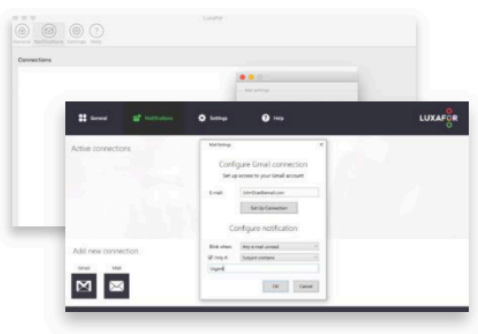

You can set notifications to blink when there is an **unread email** in your inbox or to blink only on the arrival of a **new email**.

You can even set up notifications for emails containing **specific keywords**. For example, receive notifications only when you receive an email containing the word “order” to keep up to date with your sales.

Available on:  

Zoom mode



1. Install Zoom Workspace and log in to your Zoom account.
2. Install and open the Luxafor software on your computer.
3. Navigate to the "Zoom" tab in the left menu of the Luxafor app.
4. Click "Log in to Zoom" and sign in with your Zoom account.
5. Authorize the integration by clicking "ALLOW" when prompted.
6. Customize your settings to match Zoom statuses with specific Luxafor colors (e.g., Busy = Red, Available = Green).

Notes:

- Your Luxafor device will now automatically update based on your Zoom status.
- You can edit the color settings anytime in the Luxafor app.
- Your Zoom status will be displayed only when the Zoom tab in the Luxafor app is opened. To change the Luxafor LED glow, simply open a different tab, such as Solid Color.


Integration documentation is available [here](#).



Hotkeys

You can define Hotkeys in the "Settings" section of Luxafor Software.

Save more time with Hotkeys - switch colors even faster without opening the application. This way you can control the Luxafor ORB color without taking your mind off of tasks.

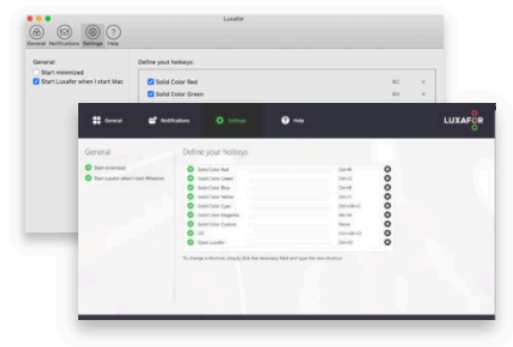

Simply type in the shortcut you wish to use, and the light will change according to your defined preferences!

Available on:



Additional Remarks

- ¹ You can use Luxafor ORB with any computer that runs the following OS:
Windows: Windows 7; Windows 8; Windows 8.1; Windows 10, Windows 11
Mac: Mountain Lion; Mavericks; Yosemite; El Capitan; Sierra; Mojave; Catalina; Big Sur, Monterey; Ventura; Sonoma; Sequoia; Tahoe.
- ² The magnet is safe to remove at any time, and it does not leave any residue.
- ³ Luxafor ORB will work only with the original USB cable provided.
- ⁴ If you wish to use Microsoft Teams in “Teams Only” mode together with Luxafor, try using the “Zapier” mode in the General section of Luxafor software and connecting the services on the Zapier platform. You can choose to get visual notifications on Luxafor when a New Message is Posted to Channel or when a New Channel is Created.

Troubleshooting Steps for Known Issues

- “I plug in the device, but nothing happens.”

1. Make sure you are using the Luxafor USB/-C cable provided.
2. Test if the USB port on your computer or hub is working correctly by plugging other devices, such as a keyboard or a mouse, into the same port.
3. Test other USB ports on your computer or hub by plugging in the Luxafor USB/-C cable connected to Luxafor ORB.
4. Test other computers with the same operating system (and its version) by plugging in the Luxafor USB/-C cable connected to Luxafor ORB.
5. Make sure you have installed the latest Luxafor software version. It's Version 2.8.0.2 for Windows and Version 2.6.52 for Mac.
6. Make sure the tab of your choice is active on the software for it to work. For example, if you wish Luxafor to display your connection on Zapier, then the “Zapier” tab must be open on Luxafor software. Notifications and Settings (Hotkeys) can work simultaneously with the 6 modes of the General section.

- “My Luxafor ORB does not work at startup after a cold start, what should I do?”

1. Make sure you have enabled “Start Luxafor when I start Windows” in the “Settings” tab of Luxafor Software.
2. Make sure that USB ports are not in "hibernation mode." Please go to your Windows "Device Manager" and click the "+" sign next to "Universal Serial Bus Controllers." Click on any "Root Hub" and select "Properties." Click the Power Management tab and ensure that "Allow the computer to turn off this device to save power" and proceed to do this under each "Root Hub." Also, from the Control Panel and Power Options, select the Hibernation Tab and deselect "Enable hibernate support."

- “My Gmail notifications are not working properly on Windows.”

or

- “There is a pop-up asking to log into my Gmail again. Is that safe?”

1. Make sure your IMAP is enabled. More information:
<https://support.google.com/mail/answer/7126229?hl=en>.
2. If you have set up a two-factor authorization, then you must generate App

Password. This is the password you must use in the Luxafor configuration, not your Gmail account password. More information:

<https://support.google.com/accounts/answer/185833>.

3. Make sure the Notifications tab in Luxafor Software is active and click "Mail".
4. Fill the fields with the information as shown in the picture below and click "OK" or Test the Connection if you wish:

Mail Settings

×

Configure e-mail connection

Enter IMAP server settings to set up connection

Username / e-mail:

sally@gmail.com

Password:

●●●●●●●●●●●●●●●●

Mail server:

imap.gmail.com

Port:

993

☒ Use SSL

Configure notification

Blink when:

Any e-mail unread

☐ Only if:

Subject contains

Test Connection

OK

Cancel

If you were unable to resolve the issues you are having with these troubleshooting steps, and you feel your product is still not working properly, please don't hesitate to contact us at support@luxafor.com or call +371 27755544.

Send us a full report of the issue, explaining the details of the situation, when the issue first occurred, and if the issue persists throughout the troubleshooting process. Don't forget to mention the OS you're using and pictures/ videos to better explain the situation.