

GY-FLC300S

Laser Cleaning Machine User Manual



security information

A. Safety Signage

	May cause serious personal injury or even threaten life safety.
	May cause general personal injury or damage to products or equipment.

B. Laser Safety Classification

According to Clause 9 of the European Standard EN 60825-1, the internal laser of this device falls under Category 4 lasers. The product emits laser radiation with a wavelength of approximately 1064 nm or 1080 nm, which can cause injury to the eyes or skin when exposed to such light intensity, either directly or indirectly. Although this radiation is invisible, the laser beam can still cause irreversible damage to the retina or cornea. During laser operation, appropriate and certified laser safety goggles must be worn.

	<u>When operating this product, ensure that laser safety goggles are worn throughout the entire process. Laser safety goggles feature selective protection against specific laser wavelengths; therefore, users should select goggles that are compatible with the laser output wavelength range specified for this product. While the laser cleaning machine is powered on, it is strictly prohibited to direct the laser output head toward any person, nor to shine the laser output head onto highly reflective surfaces.</u>
---	--

C.safety signs



Figure 1.1 – Laser marking; Figure 1.2 – Optical fiber bending prohibition marking
Figure 1.1 – Laser marking; Figure 1.2 – Optical fiber bending prohibition marking

D. Electrical Safety

① Please ground the product using the PE wire in the power cord, ensuring a secure and reliable grounding connection.

	Grounding disconnection can cause the product casing to become energized, potentially resulting in personal injury to the operator.
---	---

② Ensure that the AC voltage supply is functioning normally.

	Incorrect wiring or an incorrect supply voltage may cause irreversible damage to the laser.
---	---

1 Preface

1.1 Welcome

Thank you for choosing our GY-FLC300S handheld laser cleaning machine. This user manual provides important safety, operation, and maintenance guidelines. Before using this product, please read this manual carefully and keep it safely stored. To ensure safe operation and maintain the optimal condition of the product, please adhere to the following precautions and warnings.

This user manual is not a quality assurance document; any corrections to printing errors, modifications to the information contained herein, or improvements to the product shall be subject to interpretation by our company at any time without prior notice; such corrections shall be included in a subsequently published revised user manual.

2 Product Introduction

Laser cleaning is a novel technology based on the interaction between lasers and materials, enabling the removal of contaminants and adhered deposits from object surfaces. Compared to traditional cleaning methods, laser cleaning offers advantages such as being contactless, non-destructive to the substrate, enabling precise cleaning, being environmentally friendly, and supporting online processing; it is particularly suitable for high-speed online cleaning applications in designated areas.

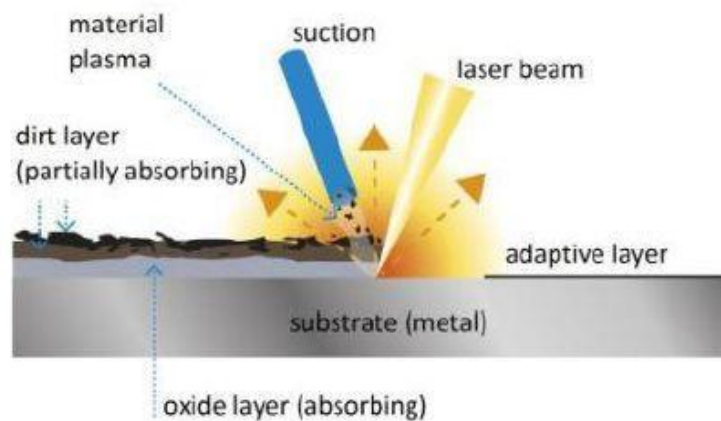


Figure 2.1 – Laser cleaning schematic diagram

The laser cleaning equipment manufactured by our company represents a cutting-edge high-tech solution for surface treatment; it is easy to install, operate, and automate. With its user-friendly operation – simply plug in the power supply and turn on the device – it enables cleaning without the use of chemical reagents, media, dust, or water. The equipment is capable of cleaning curved surfaces and achieves high surface cleanliness, effectively removing resin, paint, oil stains, dirt, grime, rust, coatings, plating layers, and oxide layers from surfaces. It finds wide application across various industries, including shipbuilding, automotive repair, rubber mold manufacturing, high-end machine tool applications, rail systems, and environmental protection.

2.1 Equipment Features and Implementation Standards

(1) Equipment Features

- ◎ Contactless cleaning – does not damage the part substrate;
- ◎ Precision cleaning enables selective cleaning at precise locations and with precise dimensional accuracy;
- ◎ No chemical cleaning solutions required; no consumables needed; safe and environmentally friendly;
- ◎ Simple operation – can be used handheld or in conjunction with a robotic arm for automated cleaning;
- ◎ Ergonomic design significantly reduces operational fatigue;
- ◎ High cleaning efficiency, saving time;
- ◎ The laser cleaning system is stable and requires almost no maintenance;
- ◎ Optional mobile battery module;

(2) Product Implementation Standards

Our company has obtained ISO 9001 International Quality Management System certification and has established a comprehensive quality assurance system covering the design, manufacturing, and service of small-and medium-power laser processing equipment.

Our company has established detailed standards covering the work environment and working conditions during the production process, basic technical requirements, cooling requirements, laser radiation safety, electrical safety, testing methods, inspection and acceptance procedures, as well as packaging and transportation. The national standards referenced in these standards include:

GB10320 – Electrical Safety for Laser Equipment and Facilities

GB7247 – Radiation Safety, Equipment Classification, Requirements and User Manual for Laser Products

GB2421 – Basic Environmental Test Procedures for Electronic Products

GB/TB360 – Specification for testing instruments for laser power energy measurement

GB/T13740 – Test method for divergence angle of laser radiation

GB/T13741 – Test method for determining the beam diameter of laser radiation beams

GB/T13862-92 – Test method for laser radiation power

GB2828-2829-87 –Batch-by-Batch Periodic Inspection Counting Sampling

2.2 Operating Environment and Related Parameters

Java runtime environment Java	
content	parameter
service voltage	Single-phase 220 V $\pm 10\%$, 50/60 Hz AC power
Total power consumption	$\leq 2000\text{W}$
operating ambient temperature	$0^{\circ}\text{C} \sim 40^{\circ}\text{C}$
Work environment humidity	$\leq 80\%$
Optical parameters	
content	parameter
Laser average power	$> 300\text{W}$
Power instability	$< 5\%$
Laser operating mode	impulse
pulse length	2–500 ns (adjustable)
Maximum single-pulse energy	2mJ
Power regulation range (%)	0–100% (Adjustable gradient)
Frequency adjustment range (kHz)	1–4000 kHz (gradually adjustable)
Optical fiber length	5m
cooling-down method	forced air cooling
Cleaning Head Parameters	
Scanning range (length $\times$ width)	0–300 mm, continuously adjustable; Dual-axis support for 13 scanning modes;
scan frequency	Maximum frequency: no less than 300 Hz
Field lens focal length (mm)	210 mm (available as optional: 160 mm / 254 mm / 330 mm / 420 mm)
depth of focus	Approx. 5 mm
Mechanical parameters	
content	parameter
Overall dimensions (length $\times$ width $\times$ height)	Approx. 662.5mm*341mm*737.5mm

Packaging dimensions (length × width × height)	Approx. 750 mm × 430 mm × 890 mm
Total weight	Approx. 55 kg
Weight after packaging	Approx. 79 kg
Cleaning head weight (excluding optical head)	< 1.46KG
mode of operation	Handheld/Automated

2.4 Cleaning Head Structure and Dimensional Drawing



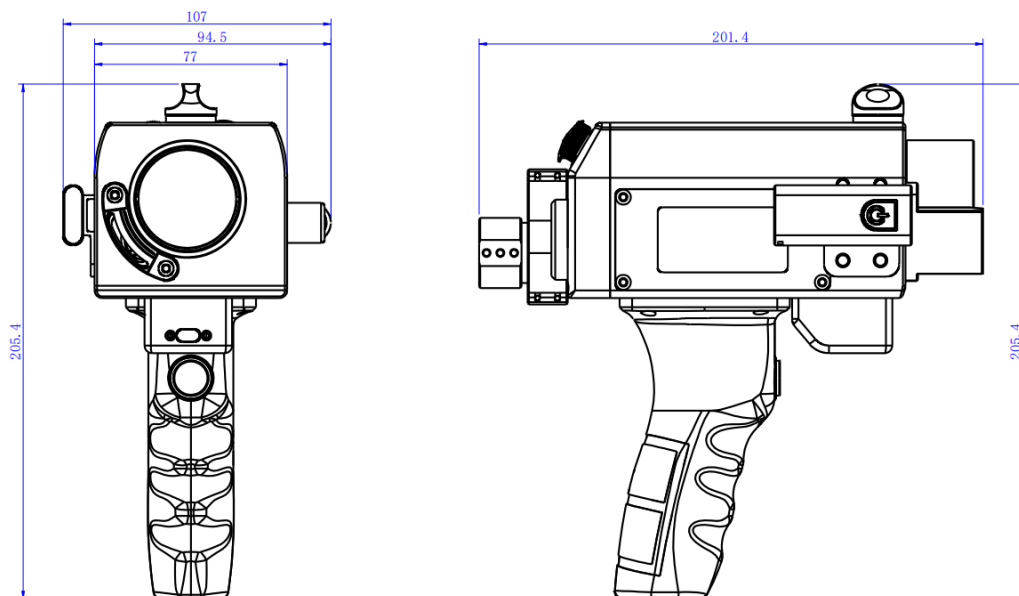


Figure 2.3 GY-QCFXYP300Max

(1) Overall dimensional drawing



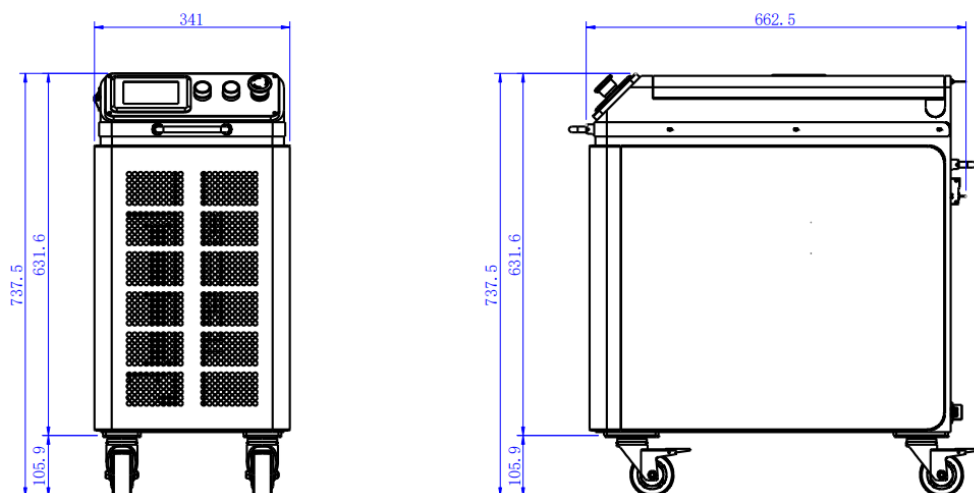


Figure 2.3 – GY-FLC300S Laser Cleaning Machine Dimensional Diagram

2.4 Configuration List

Table 2.1 GY-FLC300S Laser Cleaning Equipment Configuration List

name	ts	unit	quantity	remarks
Laser Cleaning Unit	GY-FLC300S	Taiwan	1	
Laser cleaning head	GY-QCFXYP300Max	individual	1	
Process Database	built-in	Set	1	
lasering protective eyeglass	SD-3	Pay	1	
Protective lens	43*2	Film	5	
Lens Cleaning Kit	Zeiss	Film	10	

2.5 Main Product Technical Specifications

Java runtime environment Java	
content	parameter
service voltage	Single-phase 220 V $\pm 10\%$, 50/60 Hz AC power (Customizable: 110V, 50Hz AC power)
System power consumption	Less than 120 W
operating ambient temperature	0°C~40°C
Work environment humidity	$\leq 80\%$
Optical parameters	
Acceptable average laser power	$\leq 300\text{W}$
Light transmittance	$\geq 98\%$
Laser power adjustment	10%–100% continuous gradient adjustable
Laser pulse frequency adjustment	Continuous adjustable frequency range from 1 kHz to 4000 kHz (customizable)
Laser pulse width adjustment function	support
focal distance	Standard: 210 mm (160 mm, 254 mm, 330 mm, or 420 mm available as optional);
Incident light spot diameter	$< 10\text{mm}$
Cleaning head and galvanometer/field mirror parameters	
Cleaning head dimensions	As shown in Figure 2.3, the special QCS joint supports customization.
Cleaning head weight	$< 1.46\text{KG}$
run-length	0 mm–300 mm (optional)
scan frequency	Maximum frequency: no less than 300 Hz
Maximum scan line speed	Approx. 50 m/s
Mirror material	quartz
Mirror material	quartz
Field shot	quartz
Other parameters	
screen size	Standard: 7-inch display (4.3-inch display available as an option) + 2.8-inch screen (cleaning head)
Cable length	Standard length: 6 meters
mode of operation	Handheld/Automated

2.6 Configuration List

name	ts	unit	quantity	remarks
Laser cleaning head	GY-QCFXYP300Max	individual	1	
Control Card/Box	GY-FLCS	Set	1	Includes a mirror system, etc.
touch screen	7-inch	individual	1	Features a 2.8-inch screen
Process Database	built-in	Set	1	
Field shot	Standard F210 field lens included	individual	1	F160 mm–420 mm (available as an option)
Protective lens	43*2	Film	2	

3 Installation and Operation of the Laser

Cleaning Machine

Pre-use precautions:

- Check whether the product appearance is abnormal or if the output cables are damaged, among other issues;
- Please correctly connect the quick connector according to the label on the control box;
- Please connect the power supply correctly and ensure that the power cord connections are secure;
- Check and ensure that the cleaning head's protective lens is free of any dust or dirt;

3.1 Operating Procedures

Step 1: Remove the handheld cleaning gun, ensure that the button switch on the handle is in the released position, and take off the dust cover from the front end of the laser cleaning gun;

Step 2: Unplug the external power cord to power on the device, then turn on the Emergency Stop switch;

Step 3: Press the "Start" button; the system will power on and initialize;

Step 4: After the system has started up, complete the laser cleaning parameter settings via the touchscreen interface;

Step 5: After completing the laser parameter settings, press the Laser Enable button on the laser cleaning operation screen (before pressing the button, be sure to confirm that the button switch on the handheld head handle is in the released position);

Step 6: Put on your laser safety goggles, align the gun tip with the workpiece to be cleaned, and press the black button on the handheld handle – the gun tip will then emit light to begin the cleaning process.

Step 7: After use, sequentially turn off the enable button, cover the field lens dust cover, release the "Start" button, turn off the emergency stop switch, return the cleaning nozzle to the main unit storage box, and disconnect the main power supply.

3.2 Software Control Interface

3.2.1 Boot Screen

When the device is powered on, it enters the Power-On Wait Interface (as shown in Figure 3.1); the display of this interface indicates that the screen and the control board are currently connected. If the connection is normal (this process takes approximately 5 seconds), the system will transition to the operation interface. If the transition does not occur within a reasonable time frame, it may indicate an abnormal connection between the screen and the control board; in this case, please power off the device and check whether the connectors are properly and securely seated.



Figure 3.1 – Software Startup Interface

Note: The software interface logo, device model, company information, etc., can be customized; this illustration is for descriptive purposes only (the same applies below).

3.2.2 Setup Interface

After the system initialization is complete, the operation interface will be displayed. Before using the cleaning equipment, first click the "Settings" button located in the lower-left corner of the operation interface to access the Cleaning System Settings interface, as shown in Figure 3.2. The System Settings interface displays the control card version number and the touchscreen version number. From

this interface, you can configure settings such as the safety distance, laser type, and the laser output control mode (selected by single-or double-tapping the temperature button); additionally, you can specify the mirror type (single-axis or dual-axis).



- Automatic Shutdown Enable: Set the automatic shutdown enable duration (in minutes). When the preset time is reached while the laser is active, clicking "Enable" will disable the automatic shutdown function; clicking "Disable" will reactivate it.
- Timed laser shutdown: Set the duration of a single laser pulse (unit: seconds); once the single laser pulse reaches its set duration, the laser output will stop;
- Safety Distance: The ranging sensor's operating range is set by default to a

minimum of 10 cm and a maximum of 50 cm; when the distance is less than 10 cm or greater than 50 cm, the ranging alarm will not emit light; however, the laser will emit normally within the range of 10–50 cm.

- Single-click: Press the Cleaning Head button once to emit a laser beam; after clicking "Single-Click", switch to Double-Click mode. Double-axis: The cleaning head operates on both X and Y axes; if the cleaning head is single-axis, click "Double-Axis" to switch to Single-Axis mode. Distance Measurement: Activates the distance measurement sensor; Mirror Activation: Activates the mirror alarm switch; Chiller Activation: Activates the chiller alarm switch; if the equipment is not equipped with a chiller, click "Chiller Activation" to disable the chiller alarm.
- X/Y Coefficients: Used for field lens/focusing lens configuration; when the focal length or actual working distance of different field lenses/focusing lenses differs, the actual scanning width and height can be corrected using the field lens coefficient. Password: 123;

Field Lens Model	wide in width(mm)	focal distance(mm)	coefficient	remarks
F150	120	150	100	F150 requires customization.
F200	150	200	120	
F250	180	250	140	
F300	220	300	170	
F350	260	350	195	The F350 requires customization.
F400	290	400	220	
F500	360	500	280	

- Language Switch: Configure your system language settings; 15 languages are currently supported – additional languages can be customized if needed.
- Distance function: Default – enabled;
- Temperature setting: Default – 50°C;

3.3 User Interface

3.3.1 Scanning Method

The operating interface offers 13 cleaning modes, which can be switched via the "Scan Mode" option on the screen (with cyclic switching): Linear Mode, Rectangular Mode 1, Rectangular Mode 2, Circular Mode, Sinusoidal Mode, Spiral Mode, Free Mode, Ring Mode, Rotation Mode, Triangle Mode, Rotating Circle Mode, Rotating Linear Path, and Linearly Rotating Circle.

(1) Linear Mode

In this mode, the scanning method is linear; the interface is shown in Figure 3.3.

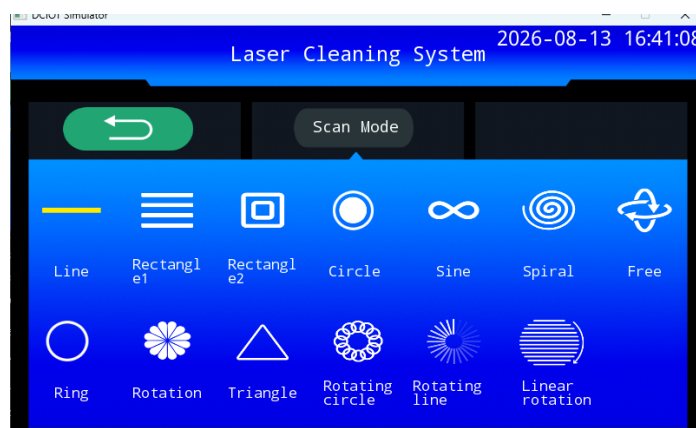


Figure 3.3 – Linear Scan Mode Operation Interface

- Laser power: Set the average laser output power within the range of 10%–100%;
- Frequency: Laser pulse repetition frequency setting, range: 1–4000 kHz;
- Scanning speed: The speed at which the laser spot focused on the workpiece surface moves; the maximum scanning speed depends on the scanning width;

run-length(mm)	Scanning speed (mm/s) (Upper limit)
Over 50	30000
40-49	18000
30-39	14000
20-29	12000

10-19	6000
5-9	3000
3-5	2000
1-3	1000

- Scan width: Set the linear scan width, ranging from 5 mm to Mx (the Mx value depends on the size of the field lens or focusing lens);

Scene type	Scanning range: Mx (mm)
F150	120
F200	150
F250	180
F300	220
F350	260
F400	290
F500	360

- Scan count: To be used under special circumstances; the number of scans can be set; when the specified number of scans is reached, the light output will stop; the default value is 0;
- Enable: After completing the parameter settings, click the Enable button; the system and laser will then enter the light output preparation state.
- Pulse width: Set according to actual field requirements; range: 1–500 ns;
- Edge Coefficient: Edge Extinction – eliminates the intense light spots at both ends of the laser beam; default value is 0; maximum setting is 2000 – adjust this value according to actual field requirements; when using this function, it is recommended to set the value to 500; Password: 123;
- Damping Delay: When combined with the Edge Coefficient, this feature effectively eliminates strong light spots on both sides; the default value is 0 – it is recommended to set this to 0.5 when using this function. Password: 123;
- Chiller alarm: The chiller's fault output signal is connected to the control card; when an alarm is triggered, the interface will display it. For air-cooled equipment, please short-circuit this signal to suppress it or disable the chiller

alarm signal on the screen interface.

(2) Rectangular Mode

In this mode, the scanning method is rectangular; the interface is shown in Figure 3.4. The definitions and ranges for power, frequency, pulse width (duty cycle), scanning speed, scanning width, and number of scans are the same as those in the linear mode; they will not be repeated here (the same applies below).





Figure 3.4 – Rectangular Scanning Mode Operation Interface

- Fill Distance: Sets the laser filling distance within the rectangle (range: 0.01–1 mm); affects the spot overlap rate along the Y-axis; default value: 0.1;
- Scan Height: Sets the scanning height for the rectangle; range: 1 mm – Mx (the Mx value depends on the field lens coefficient);

Scene type	Scanning range: Mx (mm)
F150	120
F200	150
F250	180
F300	220
F350	260
F400	290
F500	360

(3) Rectangular Two-Mode

The Rectangular Mode II is essentially the same as Rectangular Mode I; it adds a horizontal cleaning mode to the vertical cleaning mode of Rectangular Mode I.

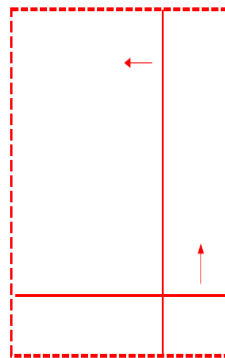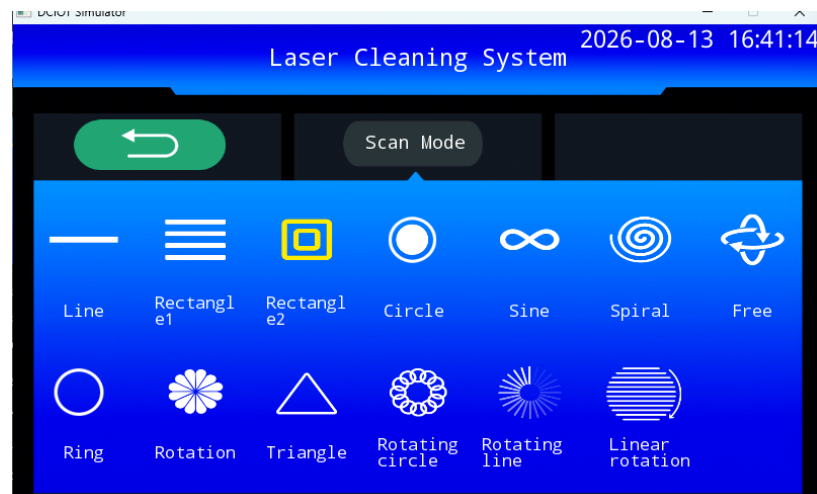

(4) **Circular Mode**

In this mode, the scanned shape is circular (as shown in Figure 3.5); the scanning range is defined solely by the circular diameter and the fill spacing;

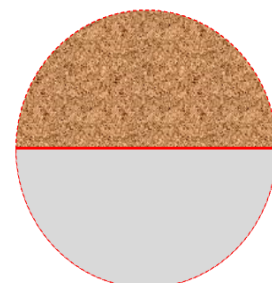
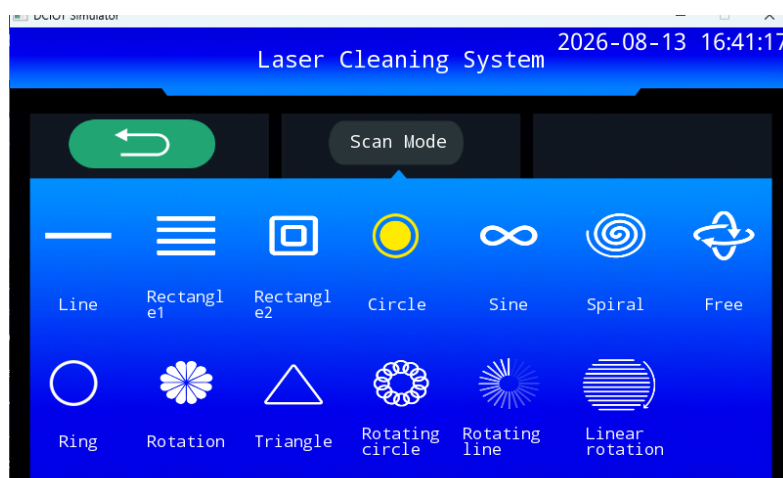


Figure 3.5 – Circular Scanning Mode Operation Interface

(5) Sinusoidal Mode

In Sinusoidal Mode, the scanning waveform is a sine curve; the operating interface is shown in Figure 3.6. In Sinusoidal Mode, the sinusoidal period must be set: this represents the period of the sine wave along the X-axis; a smaller numerical value corresponds to a higher waveform oscillation frequency, with a range of 1 mm–100 mm;

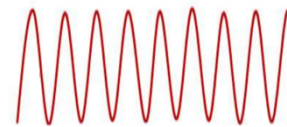
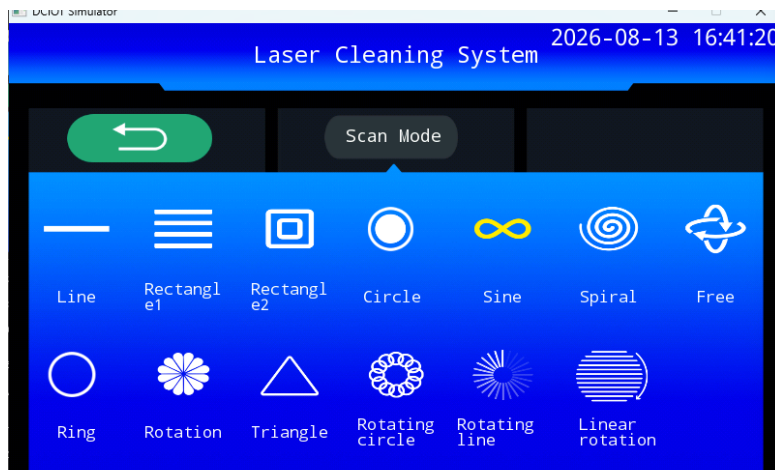


Figure 3.6 – Sinusoidal Scanning Mode Operation Interface

(6) Spiral Mode

In the spiral mode, the scanning waveform follows a spiral curve; the operating interface is shown in Figure 3.7. The parameter settings are identical to those in the sine wave mode.

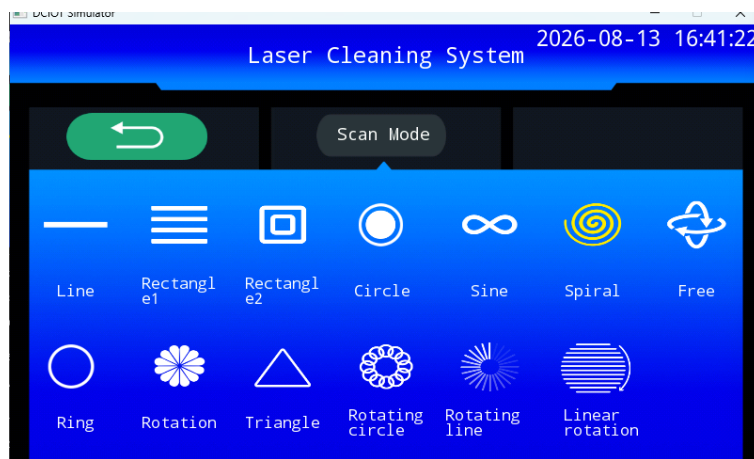


Figure 3.7 – Helical Scanning Mode Operation Interface

- Series: Number of waveforms in spiral mode (range: 1–16);

(7) Free Mode

In Free Mode, the width and frequency of the X-and Y-axis motors can be freely configured within specified ranges. In this mode, the scanning speed is not constant and may not be accurately calculated; moreover, various scanning waveforms are possible. This mode serves as a supplement to the aforementioned five modes, enabling it to accommodate a wider range of application scenarios.



Figure 3.8 – Free Scan Mode Operation Interface

- X/Y frequency: less than 100 Hz;
- Scan Height: Set the scan height for Free Mode; range: 1 mm – 50 mm;

(8) Circle


This mode represents a scenario where a ring gradually contracts inward, as shown in Figure 3.9; here, the fill spacing corresponds to the rate of the ring's contraction.



Figure 3.9 – Ring Mode Operation Interface

- Edge coefficient: Adjustable inner circle size (range: 0–100%);

(9) Rotation

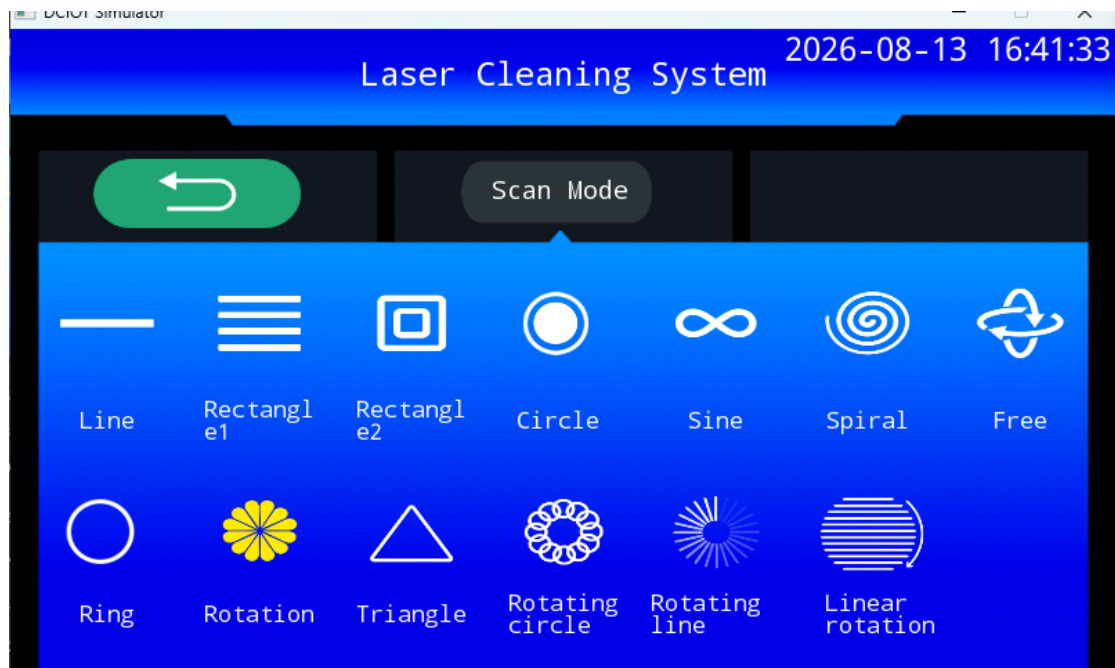


- The graph can be customized based on parameters such as period and series;

(10) Triangle



- Scan Parameters Interface – Adjust triangle size;

(11) Rotating circle

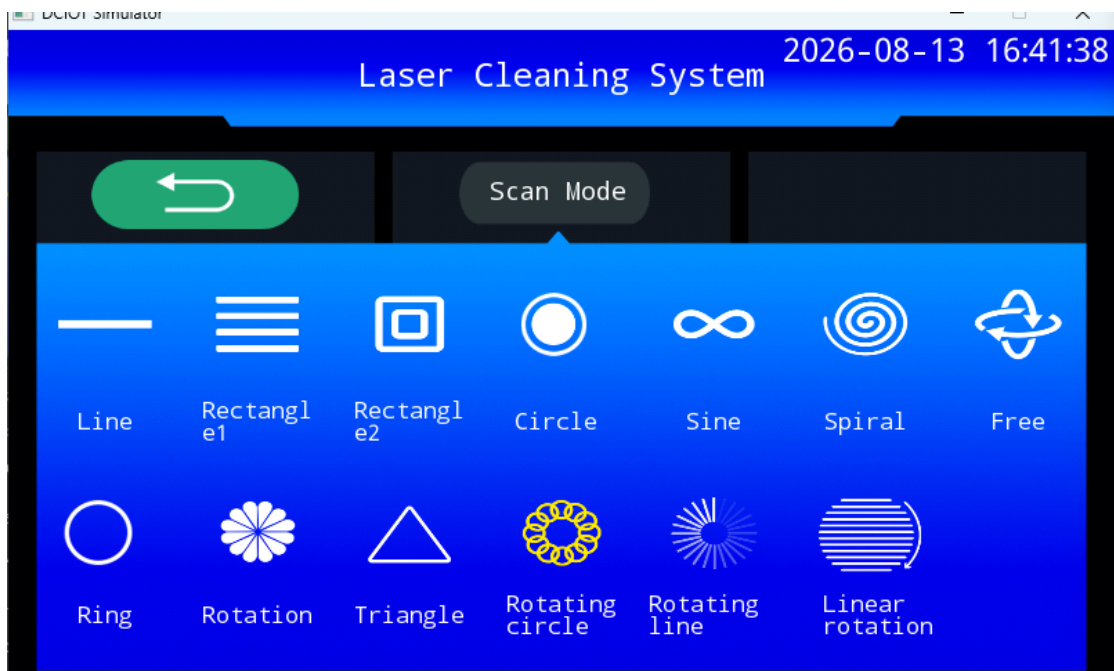

- Multiple circular elements are seamlessly connected and arranged in a 360° circle; their size can be adjusted on the scanning interface;

(12) Rotating line



- The endpoints of the straight line segment point toward the center; rotating the segment by 360° enables rotational scanning cleaning;

(13) **Linear rotating circle**




- The linear path performs a multi-angle 环绕 scan; in this mode, no fill spacing needs to be configured.


3.3.2 Database

(1) Custom Database

Custom cleaning parameters: This system provides a total of 100 customizable parameter sets (ranging from Set 1 to Set 100), with Set 1 designated as the default set and Sets 2–21 supporting custom cleaning parameter labels (Chinese/English; other languages are not currently supported). By configuring different process set parameters, users can quickly retrieve the appropriate parameter set to meet specific cleaning requirements, eliminating the need for manual reconfiguration.

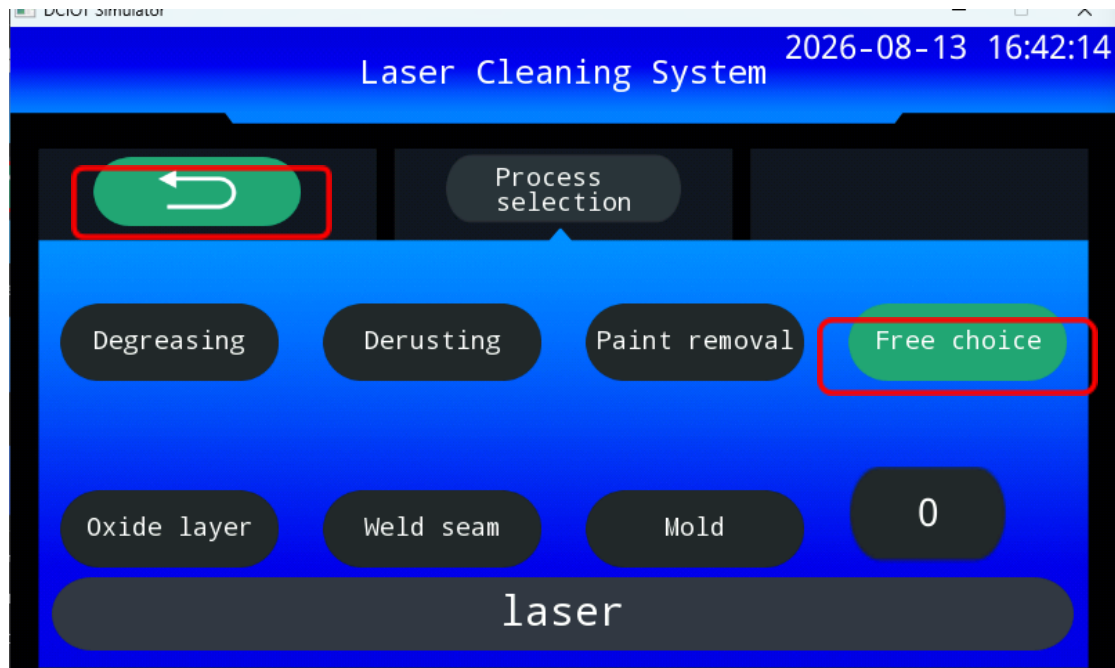

- Enter the "Process Selection" menu, then click the "Free Selection" button. In the numeric input field below "Free Selection," enter your custom parameter set. Based on the actual cleaning conditions, adjust the parameters to suit your needs, then sequentially input the relevant parameters. Finally, enter the process tag "wood" in the "Process Tag" field (Chinese/English support is currently available).

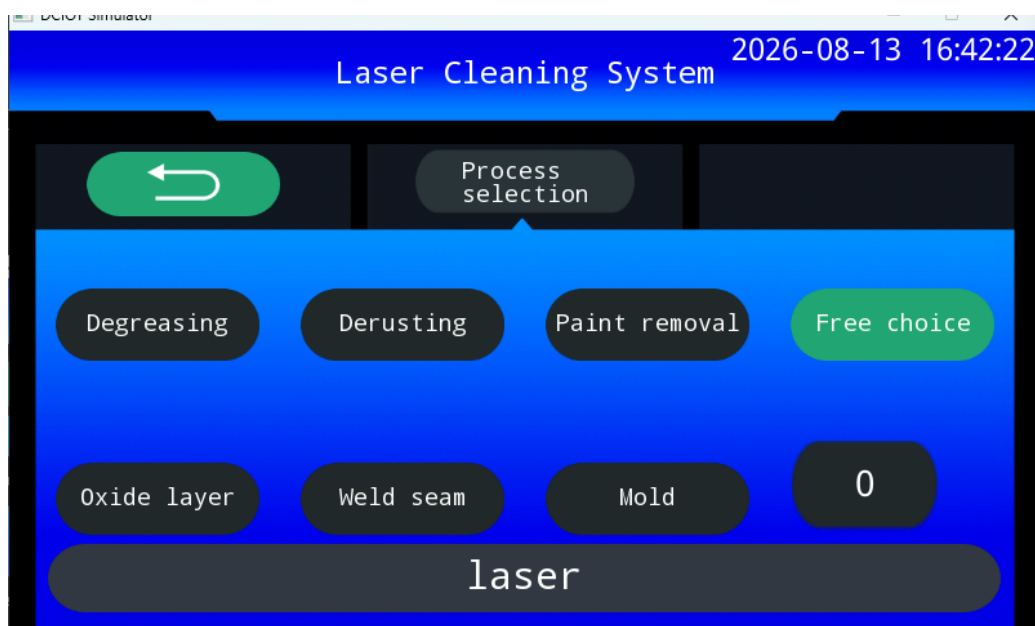



(2) Default Process Library

- The default process library is a system-integrated process database designed to accommodate lasers from various brands and specifications. By selecting and invoking the appropriate parameters, the parameter adjustment process can be effectively streamlined, the equipment's compatibility improved, and the operational complexity for personnel reduced.
- Serial Number: Select the database ID to retrieve the process data stored for that serial number (default: ID 1); Password: 123.
- Step 1: Before using the device, please verify the laser brand, single-pulse energy, and other parameters according to the data provided by the laser supplier. Refer to the JPT Laser Example to confirm the relevant laser parameters.

指标 \ 型号		YDFLP-CL-200	YDFLP-CL-300	YDFLP-CL-200	YDFLP-CL-300	YDFLP-CL-300
		-1	-1	-5	-5	-10
M ² 典型值		2		5		12
输出靶缆长度	m	5				
平均输出功率	W	>200	>300	>200	>300	>300
最大脉冲能量	mJ	1.5		5		15
频率可调范围	kHz	1-4000				
脉冲宽度	ns	2-500				

- Step 2: After powering on the device, access the Laser Cleaning System and click the "System Settings" option. A password entry window will appear;

enter the primary password ("123") to access the Device Management Interface. Then, click "Laser Selection" to enter the Laser Selection page. Based on the supplier's documentation, select the appropriate laser option; the laser model selected for the machine will be displayed in the top-right corner. At this point, the default parameters (corrosion removal, degreasing) have been applied, and the data is ready. (To switch to the default process library automatically, simply click the "Free Selection" button on the process library page to return to the Custom Process screen.)

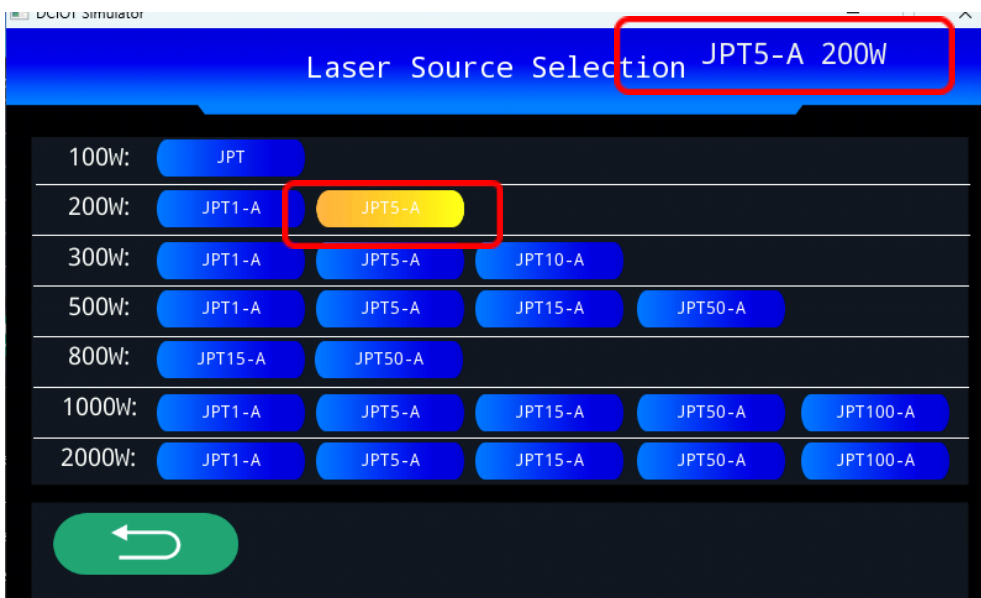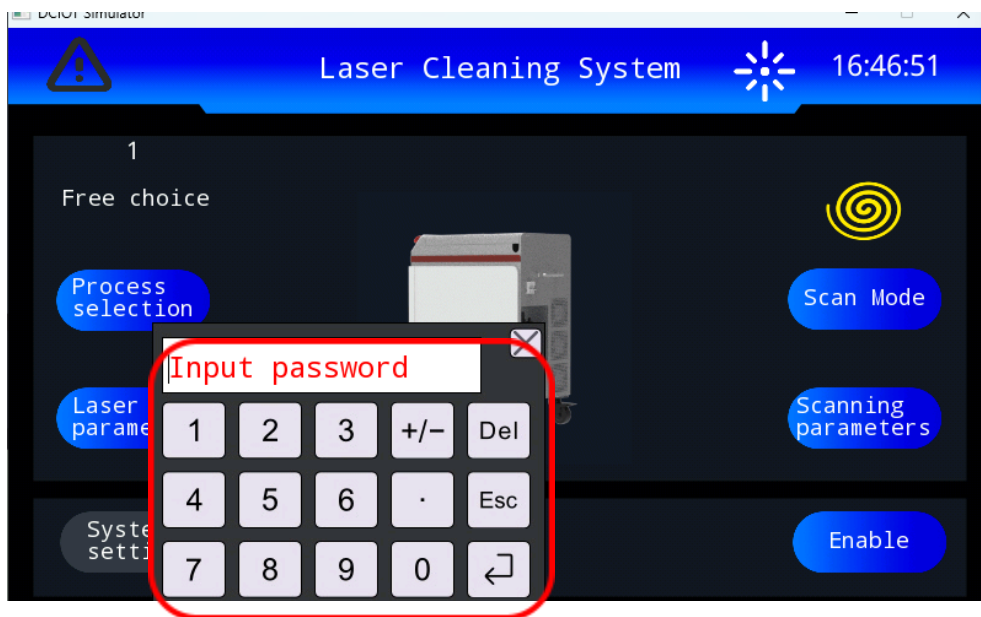

Select the appropriate laser type.

- Step 3: Return to "Process Selection." Depending on the workpiece, simply click the "Rusting Removal" button; the corresponding process label will then appear on the label line. This indicates that the system has already prepared the process parameters for the rust removal operation. Return to the "Main Page," click "Enable," and then press the "Lighting" button to initiate the rust removal process. The same procedure applies to other default process operations.


3.3.3 Parameter Settings

(1) laser parameter



- Laser power: Set the average laser output power within the range of 10%–100%;
- Frequency: Laser pulse repetition frequency setting, range: 1–4000 kHz;
- Pulse width: adjustable from 1–500 ns;


(2) Scanning Parameters

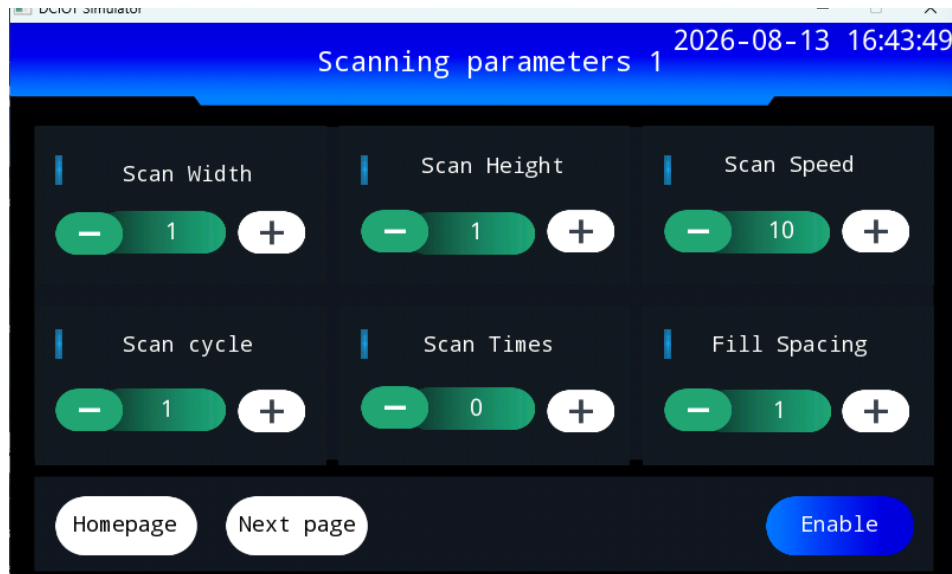




- Scanning Parameters: This interface allows you to configure parameters such as scanning width, scanning height, scanning speed, scanning cycle, number of scans, and fill spacing;

3.3.4 Decryption and Password Setup

- During the trial period, the phrase "Please activate" will appear in the top-right corner, indicating that the trial period has expired and the software needs to be activated.

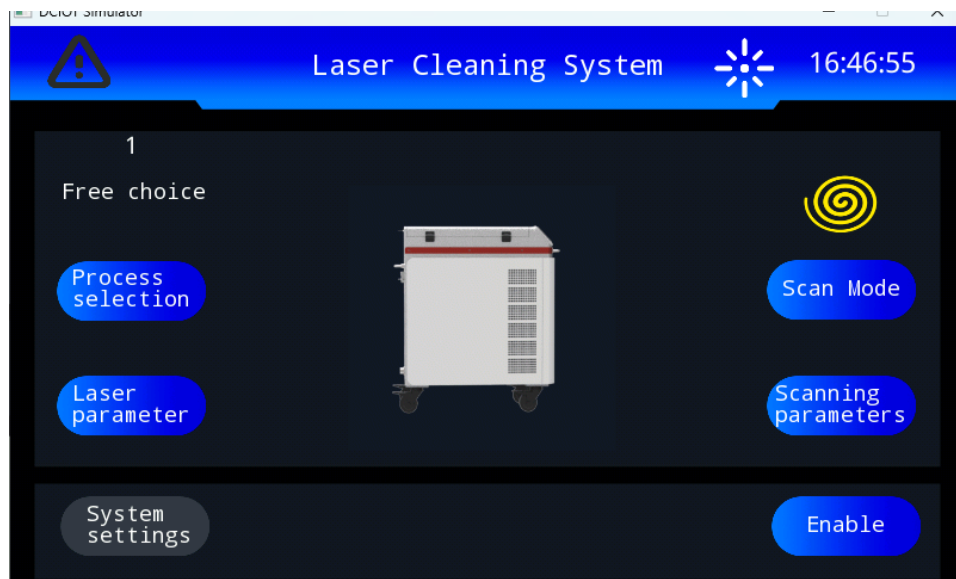


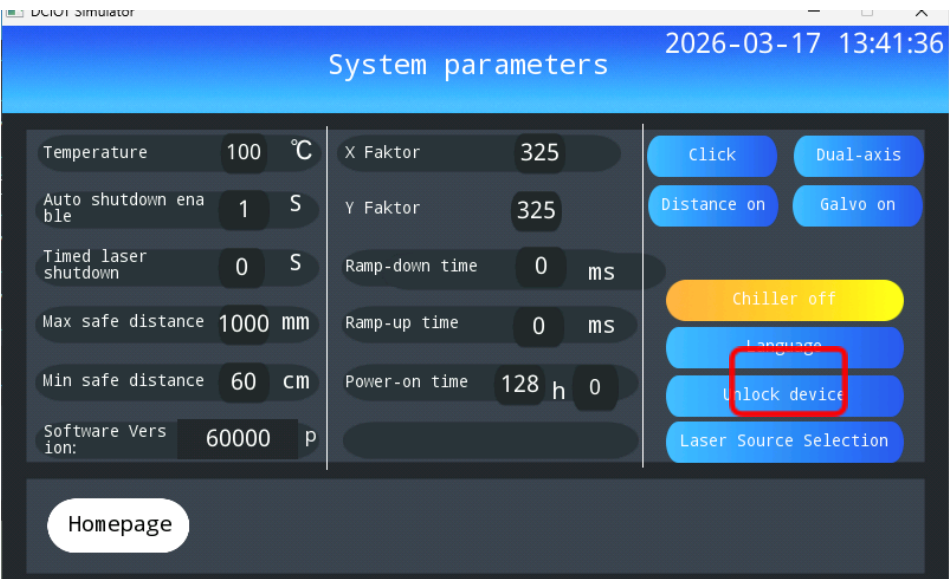

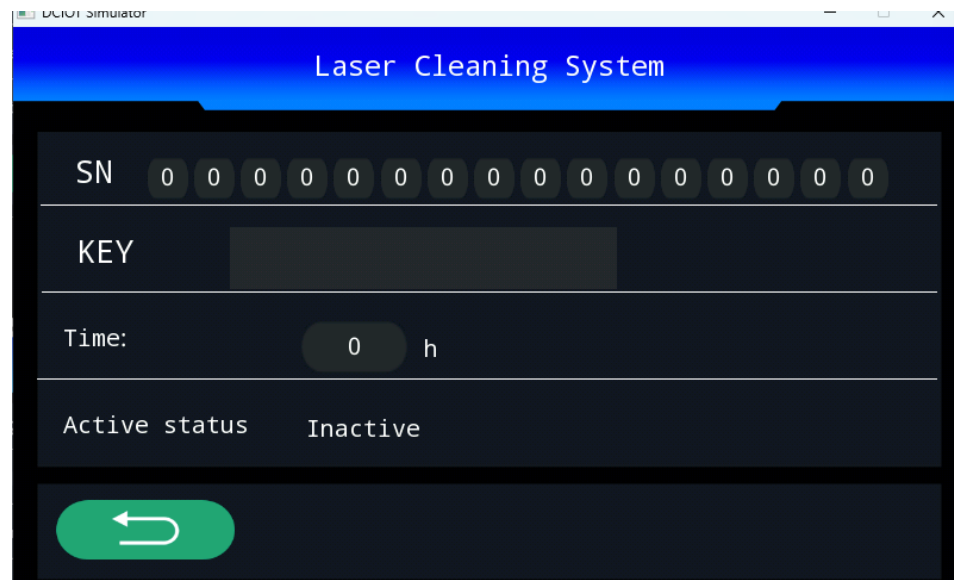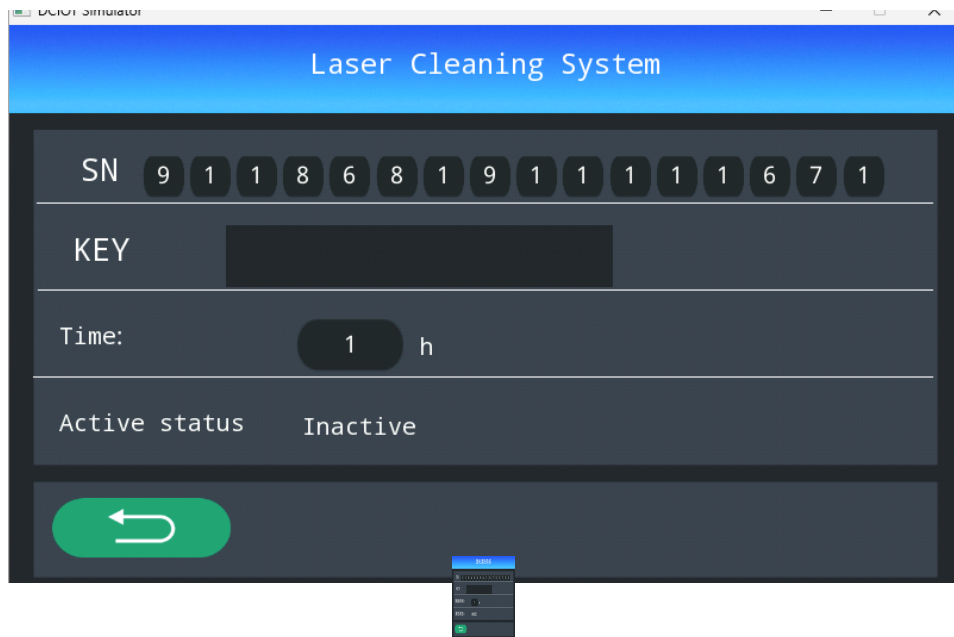



- Users can set a trial period or enable permanent decryption based on their specific on-site requirements.

(12) Other (Light Extraction Step)

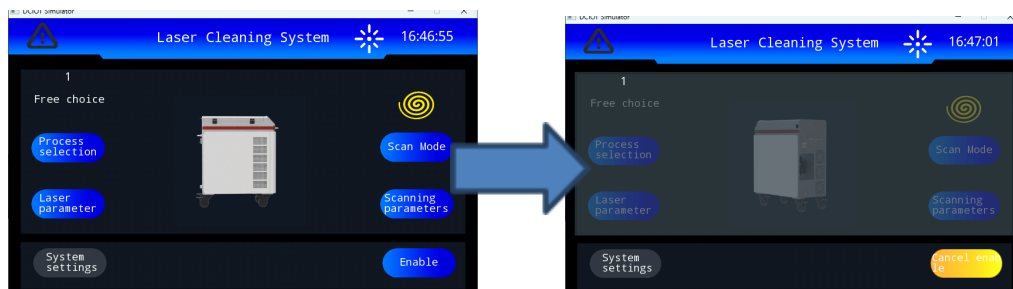

Main Interface – Confirm


Main Interface – Confirm

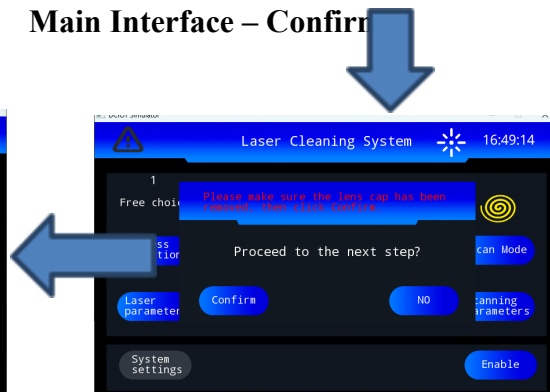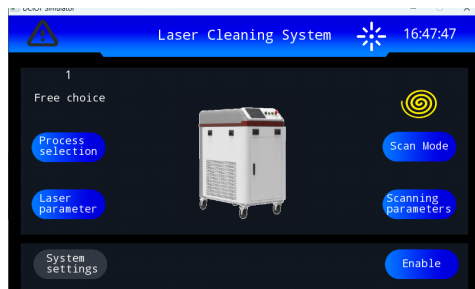


Hikari Nakazawa –After enabling


Hikari Nakazawa – After enabling

(14) Alarm View

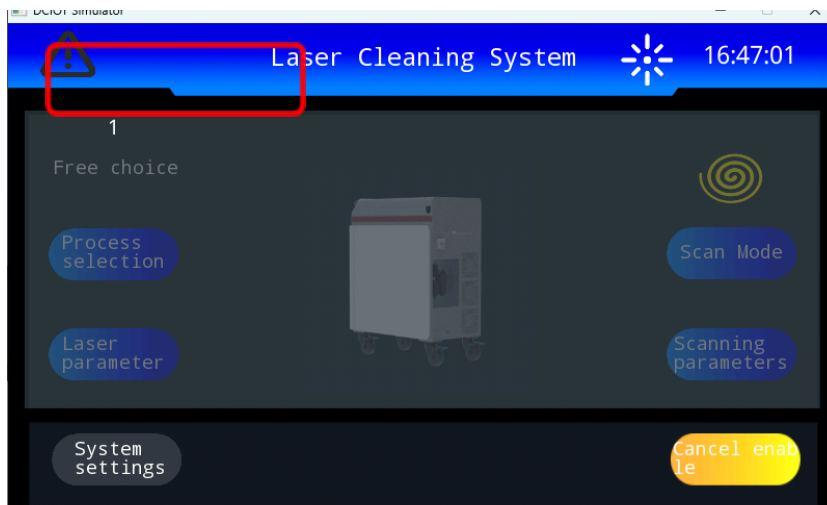

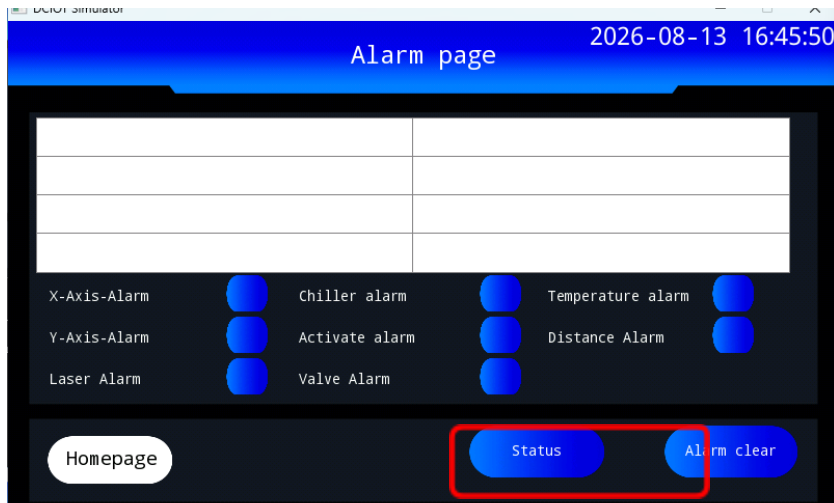


- This interface displays the alarm status of each component; red indicates an alarm, while blue indicates normal operation.

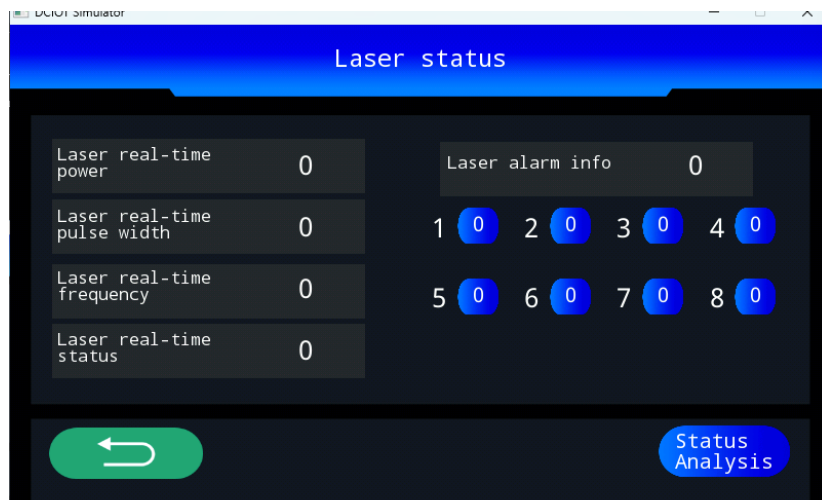

- This interface also allows you to monitor the laser's operating status during light output, displaying the laser power, pulse width and frequency, as well as the laser signal status in real time.

表【1.5】监控信息		
Byte	描述	单位
1	传感器 2 (L_Byte)	0.1℃
2	传感器 2 (H_Byte)	
3	传感器 1 (L_Byte)	0.1℃
4	传感器 1 (H_Byte)	
5	种子源 TEC 温度(L_Byte)	0.1℃
6	种子源 TEC 温度(H_Byte)	
7	二级电流 (L_Byte)	0.1A
8	二级电流 (H_Byte)	
举例：读取激光器的传感器 1		

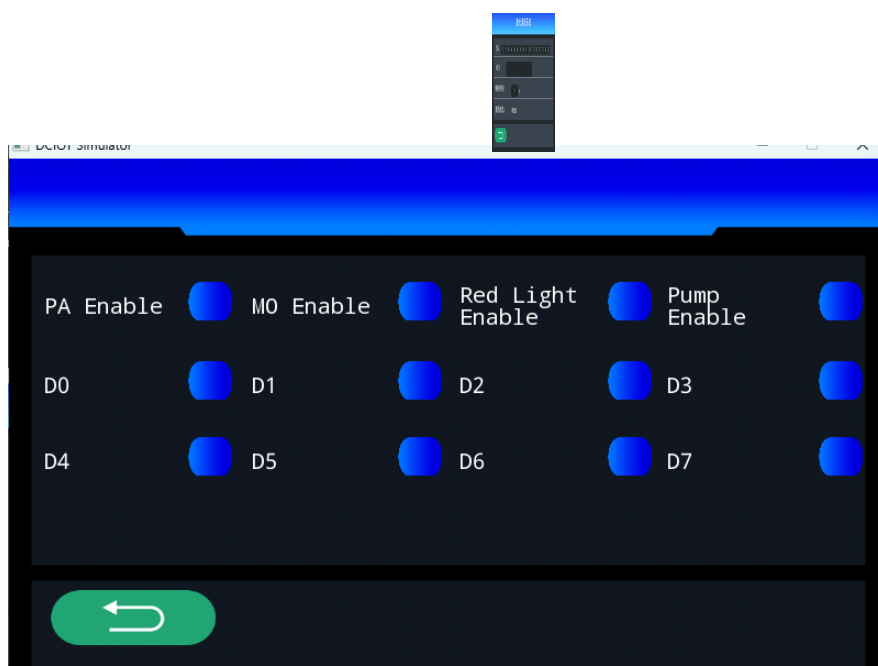

- The operational status of each laser signal can be viewed directly on this interface without requiring a physical connection to the laser device.

4 Pre-sales and After-sales Services

4.1 Service Commitment

Our company is committed to a customer-centric approach, thoroughly understanding clients' cleaning requirements, and providing comprehensive, personalized services including installation, commissioning, training, and maintenance, both pre-sales and post-sales.

(1) Pre-sales service

Prior to contract execution, the company provides clients with comprehensive production process solutions, technical consultation on laser cleaning equipment, sample testing, and equipment selection services.

(2) Installation and Commissioning

In accordance with the contract, our company will safely deliver the equipment to the user's designated installation site free of charge within the stipulated timeframe, with technical service engineers on-site for installation. Once the user has prepared the necessary spare parts for installation and commissioning, the engineers will complete the machine setup and debugging within two working days, ensuring the installation site remains tidy, clean, and well-organized throughout the process.

(3) After-sales training

The company provides complimentary technical training. Upon completion of installation and commissioning, the buyer's operators will receive on-site training at the buyer's location or at the seller's domestic training and maintenance center, continuing until they achieve basic operational proficiency with the equipment.

(4) After-sales Commitment

- The device comes with a one-year free warranty (excluding damage caused by human error or lens failure).
- Free technical consultation, process and software upgrade services;
- The response time for customer service is within 8 hours;
- Lifetime maintenance service, with only accessory replacement fees charged.
- Provide extensive software and hardware support throughout your lifetime.

4.2 Limitations of Warranty

The warranty does not cover product or component damage caused by unauthorized tampering, opening, disassembly, improper installation, or modifications by non-company personnel; damages resulting from misuse, negligence, or accidents; or damage caused by exceeding specification ranges, improper installation, maintenance, abuse, or failure to follow user manual instructions and warnings. Customers are responsible for understanding and operating in accordance with the user manual and operational guidelines. Damages caused by incorrect operations are not covered. Accessories and other components are excluded from warranty coverage.

Within the warranty period, if the buyer identifies any issues, they must submit a written request within 30 days from the date of discovery. This warranty does not cover third parties (including the specified buyer, end-user, or customer), nor does it include parts, equipment, or other products not manufactured by our company.

4.3 Technical Support and Product Maintenance

This product does not include any built-in maintenance accessories for user servicing. Therefore, all repairs outside the provided accessories must be performed by our company's technical personnel.

If any malfunction occurs during product use, please notify our technical team immediately for troubleshooting.

All repair and replacement products must be placed in the original packaging provided by our company. Otherwise, we reserve the right to refuse free repairs for

any product damage caused by improper handling.

Upon receiving our products, please verify their integrity and complete accessories. Should any abnormalities be detected, please contact both the carrier and our company immediately.

Our company will continue to develop new products. The product information listed in the manual may change without prior notice. All technical specifications shall be subject to the terms of the contract.

The warranty and service terms provided by our company are for reference only. The official service and warranty terms shall be subject to the provisions in the contract.