

Luxafor Cube 2



User Manual

Luxafor Cube 2 Package Contents

1x Luxafor Cube 2
1x USB Charging Cable
1x Magnet with double-sided tape
4x anti-slip pads

Product Specifications

Dimensions: 57 x 55 x 26 mm (2.24 x 2.24 x 1.02")

Weight: 68 g

Light: 6 x RGB LEDs

Consumption: Rated power up to 26 mA

Bluetooth connectivity range: Up to 80 meters

Charging: With a standard USB-C data cable

Battery: Built-in 1200mAh battery

Working time: 46 h - 90 non-stop use.¹

Charging Instructions

1. Prior to use, it is advised to fully charge the Cube 2 unit by connecting the included charging cable to a USB power outlet such as a USB charger, and plug the other end into the Cubes' USB charging port.
2. Once plugged in - the red light indicator for the USB charging port will be blinking in red. Once the device is fully charged - the indicator light will turn green.
3. If switched off, the Luxafor Cube 2 will turn on immediately when the charging has begun.²
4. You can use the Cube 2 unit safely during the charging process - it will operate normally.



The Back of the Luxafor Cube 2

1. The power button to switch the device on/off as well to switch modes to Eco mode for example.
2. USB port for charging the device.
3. Charging indicator light is located above the USB port.
4. The 4 anti-slip pads (optional) should be placed at the back of the device on 4 corners.

Getting Started

1. When the device has been fully charged, it's ready for use.
2. Placement options - you have 2 setup variations depending on the type of placement you have chosen for your Cube 2:
 - a) For placement **using magnet** (on a wall, desktop or workstation):
Remove the plastic from the double-sided tape that is on the magnet and attach it to the backside of the Cube 2 and then attach the device to the surface on which you would like to place it on.³
 - b) For placement **on a horizontal surface** (on a desk):
Unpack the 4 anti-slip pads and carefully stick them to the backside of the Cube 2 and place the Cube 2 on the surface of your liking, such as a desk or any other flat surface.
3. Short press the button at the back of the Luxafor Cube 2 unit to turn on the device.
4. Change the colors by placing the Cube 2 sideways, as shown below:



5. Enjoy your Luxafor Cube 2!

Turning the Cube 2 Unit Off

To turn the Luxafor Cube 2 off: Short press on the button at the back. Release when the LED light of the device switches off.

Sleep Mode

If you place the Cube 2 in a face-up position, it is not turned off. In this position, the device enters “Sleep Mode”, where it is ready to be used as soon as it is positioned upright again.

Eco Mode

To use Eco Mode, press and hold the button at the back of the Luxafor Cube 2 for a couple of seconds. Release when Yellow color is indicated, now Eco Mode is activated. The same applies to exiting the Eco Mode - press and hold the button for 2 seconds.

Switch Mode

When Switch mode is enabled the Cube 2 will indicate the Red color by pulsating (blinking and running Red clockwise) this means that Cube 2 unit is looking for a connection with a nearby Luxafor Bluetooth device. When Switch mode is not enabled, the Cube 2 will indicate solid colors (no blinking).⁴ To enter the Switch mode and allow the Cube to connect to the Luxafor Bluetooth device, hold the power button until cyan color is indicated (after holding for approximately 3 seconds). After releasing the power button, the Cube 2 unit will start searching for a connection with a nearby Luxafor Bluetooth device (it must be turned on). In case the devices do not connect, hold the power button on the Cube 2 for approximately 10 seconds until the purple color is indicated and then release. When the purple light is running clockwise, the Cube 2 unit is looking for a new connection with a nearby Luxafor Bluetooth device.

Understanding the Color Indicators


Blue color lights flash for a while when placing the Cube 2 in a face-up position.

Yellow color upon longer pressing activates or deactivates Eco Mode.

Cyan (light blue) color after holding the button for 3-5 seconds changes the device between either Cube (standalone, solid glow) or Switch (connected with a Luxafor Bluetooth device) mode.


Purple color running when the device is in the Switch mode trying to connect to a new Luxafor Bluetooth device.

Red color running when the device is searching for the already connected Luxafor Bluetooth device.

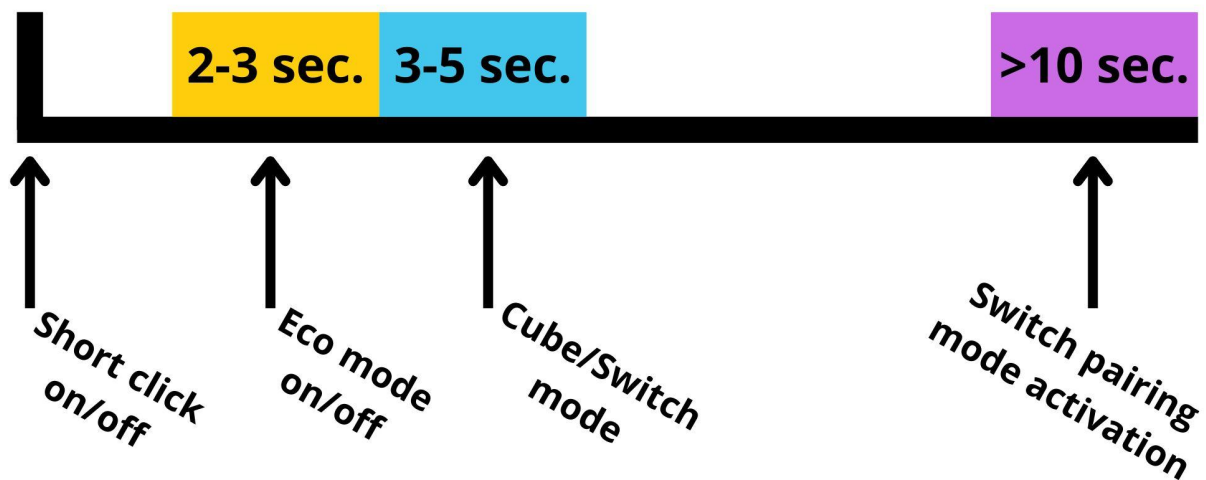

Reading the Battery Levels on the Cube 2

Place the Luxafor Cube 2 in a face-up position to check the battery levels. The LED light indicator surface of the device will indicate Cyan Blue color, and the total amount of LEDs shining will indicate approximate power left on the Switch Cube 2 device. LEDs are placed as shown in the following scheme below:

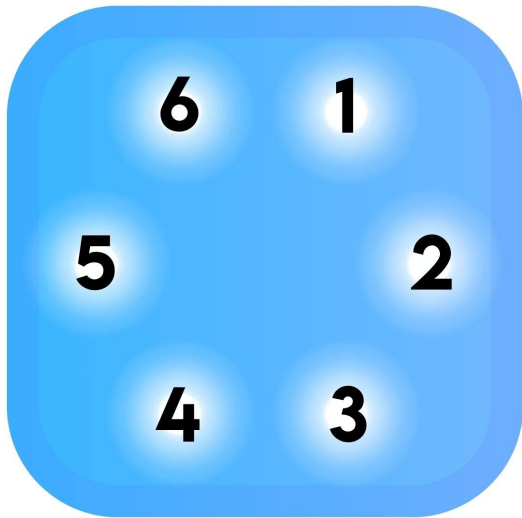

- The battery is fully charged when all 6 LED lights are shining.
- The power level indicators will start to drop, starting from LED No. 1 going clockwise.
- Consequently, when the battery level is critically low, it will indicate only the LED light No. 6 (in the upper left corner) shining. This indicates that an immediate charging is needed.

If you have any questions, please don't hesitate to contact us at support@luxafor.com or call +371 27755544.

Send us a full report of the issue, explaining the details of the situation, when the issue first occurred, and if the issue persists throughout the troubleshooting process. We strongly recommend adding pictures/ videos to better explain the situation.

Additional Remarks

¹ Working time: average 66 h: 46 h on continuous use for yellow color (58 h in Eco mode);

73 h on continuous use in green, red, or blue colors (90 h working time in Eco mode).

² If the battery level for the Switch Cube 2 is extremely low, it is possible that when starting the charging process, the device will not turn on immediately. It will charge for a short period of time and once it has enough power, will turn on and operate normally.

³ Make sure that you stick the magnet to a dry, clean and smooth surface for better grip.

⁴ It is possible to use Cube 2 as a standalone device, but you can also connect the Cube 2 unit with a Luxafor Bluetooth device - to use it as a remotely controllable Luxafor Switch PRO unit.